

# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

---








 
 





# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

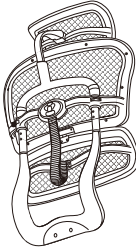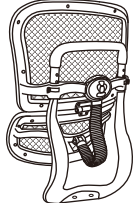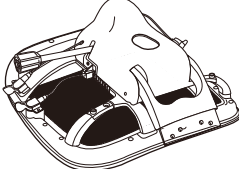Remove all items from the carton. Verify all components before assembly. Please tighten your chair hardware every six months.
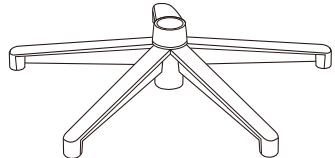
### Part List

Key	Description	Part	Qty.	Spare
A	LEM4ERG Backrest		1	
B	LEM6ERGLO Backrest		1	
C	Seat		1	
D	Armrests (1 left & 1 right armrest)		2	
E	Seat Post(Cylinder)		1	
F	Star Base		1	
G	Caster		5	
H	Type A Arm Bolts (1/4" x 1")		2	1
I	Type B Arm Bolts (1/4" x 5/8")		2	1
J	Back Bolts (M8 X 17mm)		2	1
K	Washers for Arm Bolts (Ø6.5*10.5*1.5mm)		4	2
L	Allen Wrench		1	

 


# Ergohuman Office Chair Assembly Guide

## SMS-04-V14


Remove all items from the carton. Verify all components before assembly.

### STEP 1

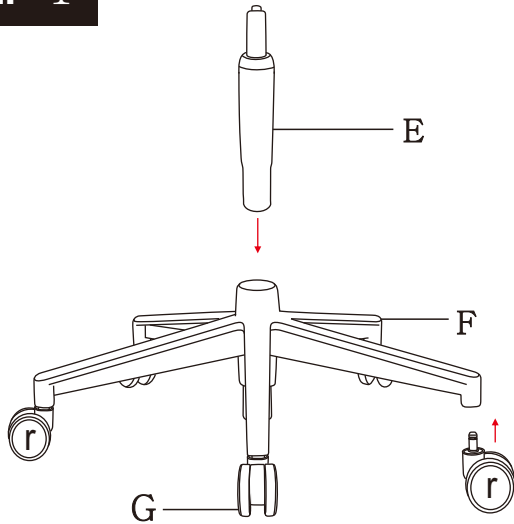

Press the Casters (G) into the holes at the end of each leg of the Base (F).  
Insert Seat Post (E) into the center hole of the base (F).


### STEP 2

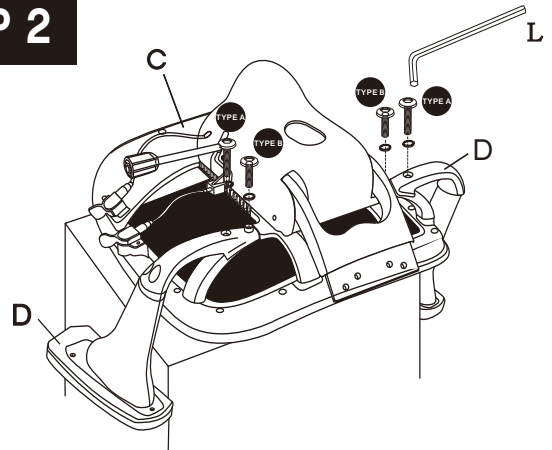 

The **Type B Arm Bolt** is shorter and will be inserted into the hole **CLOSER** to the mechanism. The **Type A Arm Bolt** is longer and will be inserted into the hole **FARTHER** away from the mechanism.

For easy assembly, place the Seat Cushion (C) face down on a flat surface. Attach Armrest (D) to the Seat Cushion (C) as shown using 1 Type A Arm Bolt (H) with 1 washer (K) and 1 Type B Arm Bolt (I) with 1 washer (K) on each arm. Tighten the bolts securely with the enclosed Allen Wrench (L).


### STEP 3

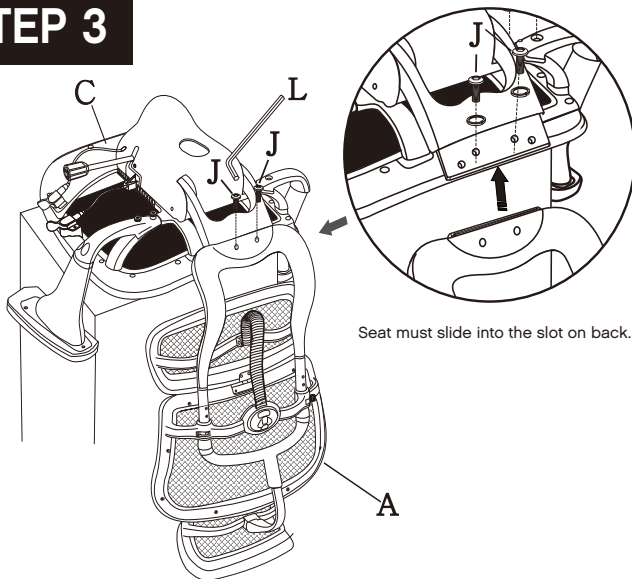 

Seat must slide into the slot on back.

**Please be careful to use the correct Back Bolts (J).** Assemble the Backrest (A) to the Seat Cushion (C) using 2 Back Bolts (J). Tighten the bolts securely with the enclosed Allen Wrench (L).

### STEP 4

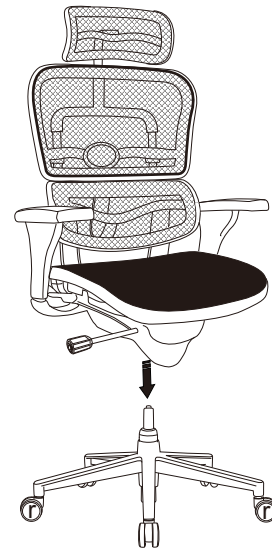 

Now turn the assembled seat upright and locate the center hole of the Mechanism over the Seat Post. Push down firmly until the connection is secure.

### PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- **EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.**

 
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING – IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.




# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

### A1 HEADREST HEIGHT ADJUSTMENT

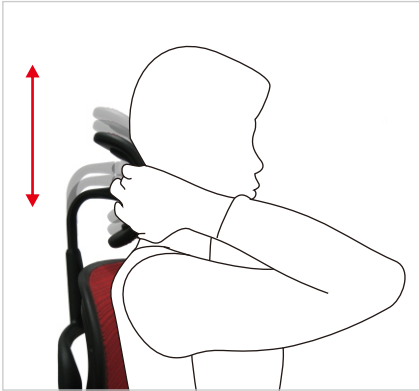

### A2 HEADREST ANGLE ADJUSTMENT

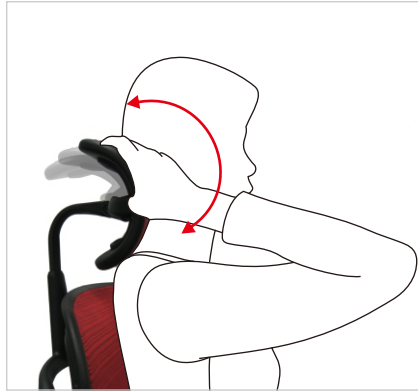 

#### A1 HEADREST HEIGHT ADJUSTMENT

While seated, hold headrest frame and move up or down to adjust height. There are 6 positions with a 1.6" range of adjustment. For LEM4ERG only.

#### A2 HEADREST ANGLE ADJUSTMENT

While seated, hold the headrest cushion and turn to adjust the angle. The Headrest has a 30° angle adjustment. For LEM4ERG only.

### B1 BACKREST TILT ANGLE ADJUSTMENT



### B2 BACKREST TENSION ADJUSTMENT



 
#### B1 BACKREST TILT ANGLE ADJUSTMENT

While seated, pull the single rod control lever completely backward and lean against the back. When your desired angle is achieved, return the lever to the original middle position to lock your tilt angle into place. There are 3 positions that provide 25° of range.


#### B2 BACKREST TENSION ADJUSTMENT

While seated, turn the Backrest Tilt Tension Adjustment handle clockwise or counterclockwise to adjust the tilt tension to your preferred level of resistance.

### B3 BACKREST HEIGHT ADJUSTMENT

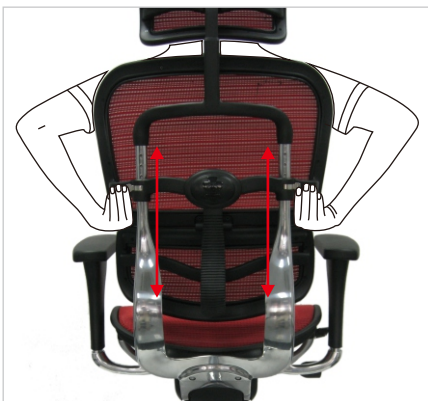

### B4 LUMBAR SUPPORT HEIGHT ADJUSTMENT

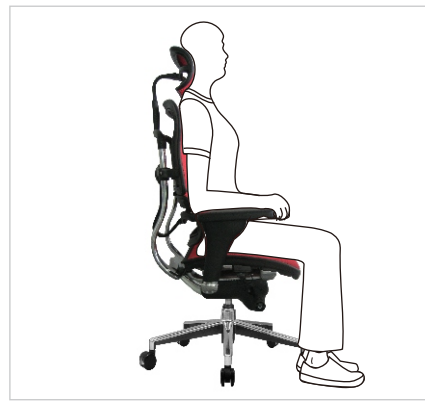 

#### B3 BACKREST HEIGHT ADJUSTMENT

While seated, hold the sides of the backrest handle and move up or down. There is a 1.57" range of adjustment.

#### B4 LUMBAR SUPPORT HEIGHT ADJUSTMENT

A. The height of the lumbar support can be adjusted by lifting or lowering the backrest height.

B. Suitable height of the lumbar support provides optimum comfort.

 




# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

### C1 ARMREST HEIGHT ADJUSTMENT

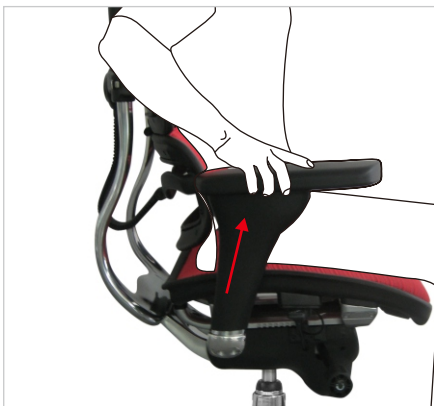

### C2 ARM PAD ANGLE ADJUSTMENT



#### C1 ARMREST HEIGHT ADJUSTMENT

While seated, grasp each armrest and raise to your desired height. In order to lower the arm, lift the armrest to its highest position and it will go back down to the lowest height. Then repeat to get to your desired height. The arm height adjustment range is 3.3".

#### C2 ARM PAD ANGLE ADJUSTMENT

While seated, a 15° range of movement can be achieved by swiveling the arm pads inward or outward.

 
### C3 ARM PAD FORWARD AND BACKWARD ADJUSTMENT



#### C3 ARM PAD FORWARD AND BACKWARD ADJUSTMENT

While seated, push the arm pads forward or backward to a desired position. The range of movement is approximately 2".


### D1 SEAT HEIGHT ADJUSTMENT

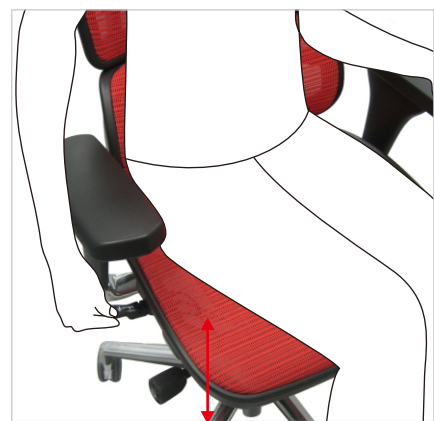

#### D1 SEAT HEIGHT ADJUSTMENT

While seated, pull the single rod control lever upward and hold it while raising or lowering the seat to reach your desired seat height. When the lever is released to its original position, the seat height is locked. The seat height adjustment range is approximately 3.6".
 
### D2 SEAT DEPTH ADJUSTMENT

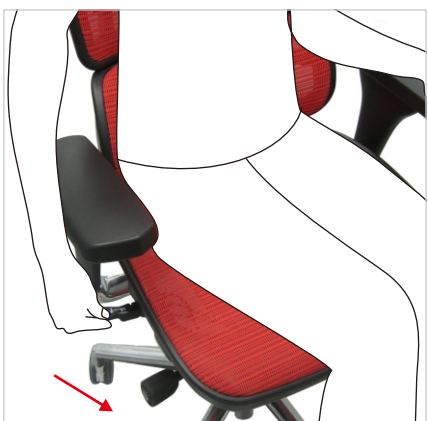

#### D2 SEAT DEPTH ADJUSTMENT

While seated, push the single rod control lever forward to adjust the seat depth. The range of movement for the seat is approximately 1.97". When your desired seat position is achieved, return the lever to the original middle position to lock your seat position into place.



# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

---






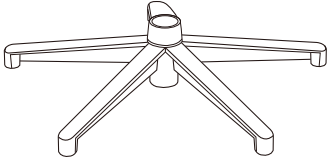

 

 




# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

Remove all items from the carton. Verify all components before assembly. Please tighten your chair hardware every six months.
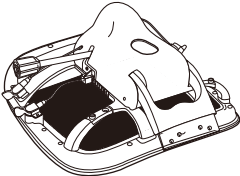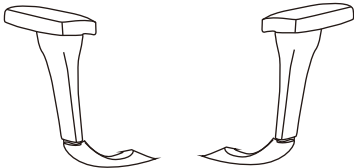
### Part List

Key	Description	Part	Qty.	Spare
A	LE9ERG Backrest		1	
B	LE10ERGL0 Backrest		1	
C	Seat		1	
D	Armrests (1 left & 1 right armrest)		2	
E	Seat Post(Cylinder)		1	
F	Star Base		1	
G	Caster		5	
H	Type A Arm Bolts (1/4" x 1")		2	1
I	Type B Arm Bolts (1/4" x 5/8")		2	1
J	Back Bolts (M8 X 17mm)		2	1
K	Washers for Arm Bolts (Ø6.5*10.5*1.5mm)		4	2
L	Allen Wrench		1	

 


# Ergohuman Office Chair Assembly Guide

## SMS-04-V14


Remove all items from the carton. Verify all components before assembly.

### STEP 1

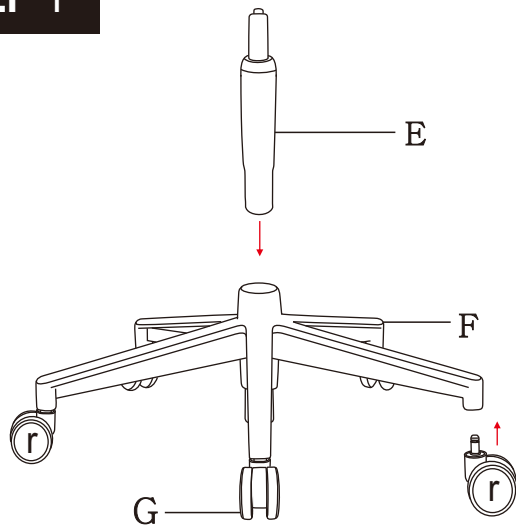

Press the Casters (G) into the holes at the end of each leg of the Base (F).  
Insert Seat Post (E) into the center hole of the base (F).


### STEP 2

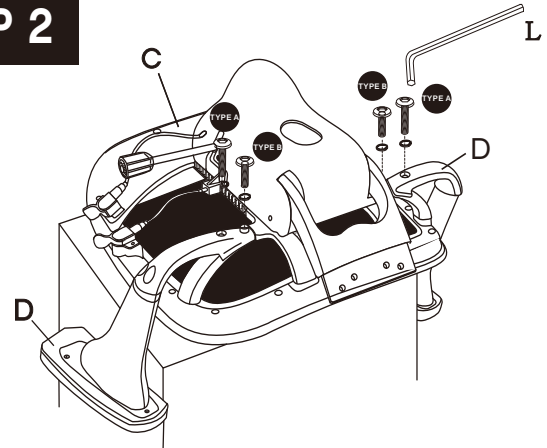 

The **Type B Arm Bolt** is shorter and will be inserted into the hole **CLOSER** to the mechanism. The **Type A Arm Bolt** is longer and will be inserted into the hole **FARTHER** away from the mechanism.

For easy assembly, place the Seat Cushion (C) face down on a flat surface. Attach Armrest (D) to the Seat Cushion (C) as shown using 1 Type A Arm Bolt (H) with 1 washer (K) and 1 Type B Arm Bolt (I) with 1 washer (K) on each arm. Tighten the bolts securely with the enclosed Allen Wrench (L).

### STEP 3

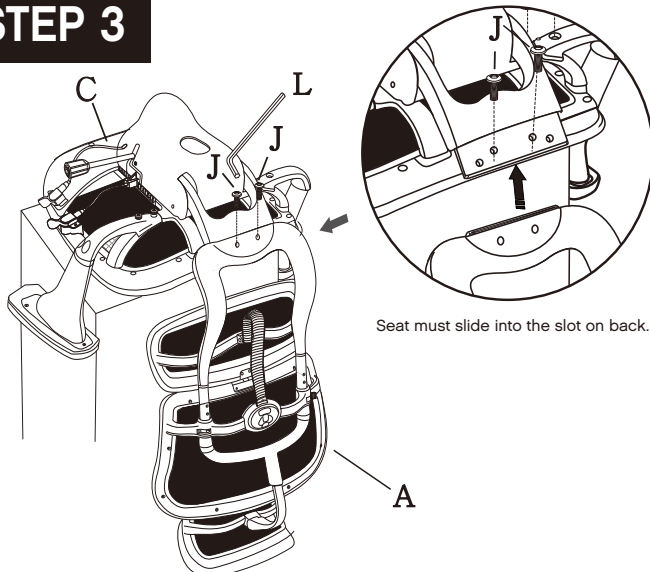 

Please be careful to use the correct Back Bolts (J). Assemble the Backrest (A) to the Seat Cushion (C) using 2 Back Bolts (J). Tighten the bolts securely with the enclosed Allen Wrench (L).

### STEP 4



Now turn the assembled seat upright and locate the center hole of the Mechanism over the Seat Post. Push down firmly until the connection is secure.

### PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- **EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.**

 
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING – IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.




# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

### A1 HEADREST HEIGHT ADJUSTMENT

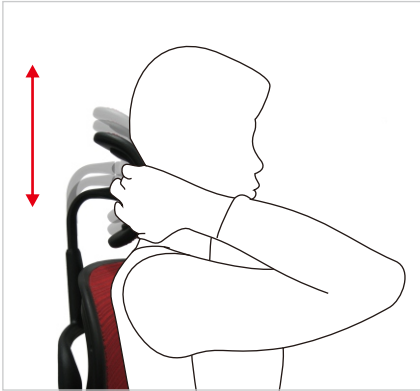

### A2 HEADREST ANGLE ADJUSTMENT

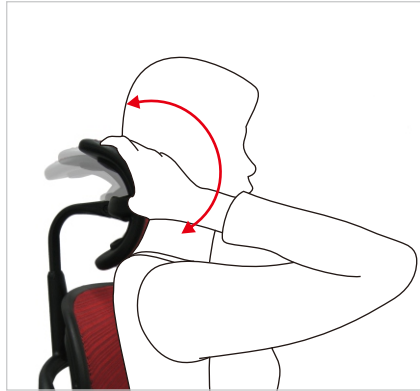 

### A1 HEADREST HEIGHT ADJUSTMENT

While seated, hold headrest frame and move up or down to adjust height. There are 6 positions with a 1.6" range of adjustment. For LE9ERG only.

### A2 HEADREST ANGLE ADJUSTMENT

While seated, hold the headrest cushion and turn to adjust the angle. The Headrest has a 30° angle adjustment. For LE9ERG only.

### B1 BACKREST TILT ANGLE ADJUSTMENT



### B2 BACKREST TENSION ADJUSTMENT



 
### B1 BACKREST TILT ANGLE ADJUSTMENT

While seated, pull the single rod control lever completely backward and lean against the back. When your desired angle is achieved, return the lever to the original middle position to lock your tilt angle into place. There are 3 positions that provide 25° of range.


### B2 BACKREST TENSION ADJUSTMENT

While seated, turn the Backrest Tilt Tension Adjustment handle clockwise or counterclockwise to adjust the tilt tension to your preferred level of resistance.

### B3 BACKREST HEIGHT ADJUSTMENT

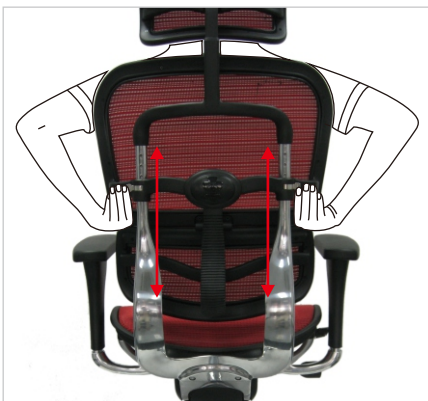

### B4 LUMBAR SUPPORT HEIGHT ADJUSTMENT

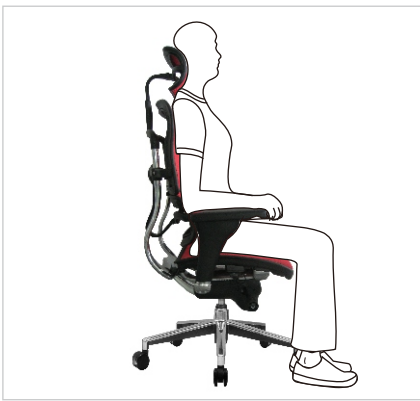 

### B3 BACKREST HEIGHT ADJUSTMENT

While seated, hold the sides of the backrest handle and move up or down. There is a 1.57" range of adjustment.

### B4 LUMBAR SUPPORT HEIGHT ADJUSTMENT

A. The height of the lumbar support can be adjusted by lifting or lowering the backrest height.

B. Suitable height of the lumbar support provides optimum comfort.

 





# Ergohuman Office Chair Assembly Guide

## SMS-04-V14

### C1 ARMREST HEIGHT ADJUSTMENT

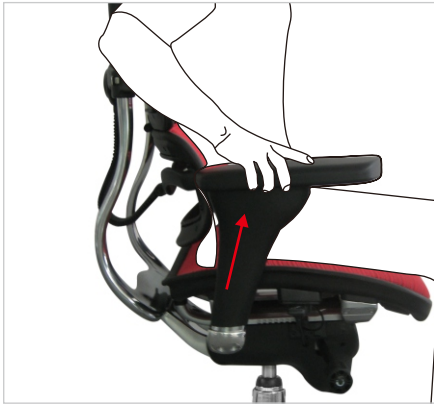

### C2 ARM PAD ANGLE ADJUSTMENT

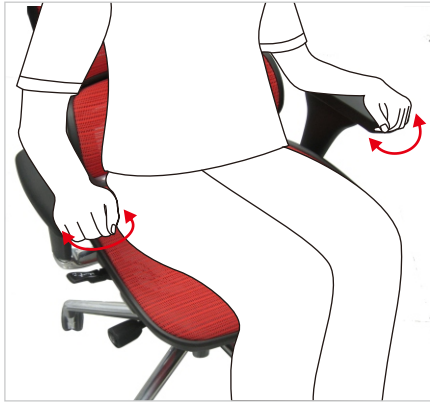 

#### C1 ARMREST HEIGHT ADJUSTMENT

While seated, grasp each armrest and raise to your desired height. In order to lower the arm, lift the armrest to its highest position and it will go back down to the lowest height. Then repeat to get to your desired height. The arm height adjustment range is 3.3".

#### C2 ARM PAD ANGLE ADJUSTMENT

While seated, a 15° range of movement can be achieved by swiveling the arm pads inward or outward.

 
### C3 ARM PAD FORWARD AND BACKWARD ADJUSTMENT



#### C3 ARM PAD FORWARD AND BACKWARD ADJUSTMENT

While seated, push the arm pads forward or backward to a desired position. The range of movement is approximately 2".


### D1 SEAT HEIGHT ADJUSTMENT

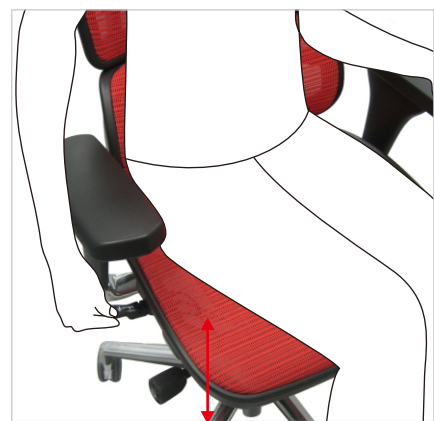

#### D1 SEAT HEIGHT ADJUSTMENT

While seated, pull the single rod control lever upward and hold it while raising or lowering the seat to reach your desired seat height. When the lever is released to its original position, the seat height is locked. The seat height adjustment range is approximately 3.6".
 
### D2 SEAT DEPTH ADJUSTMENT

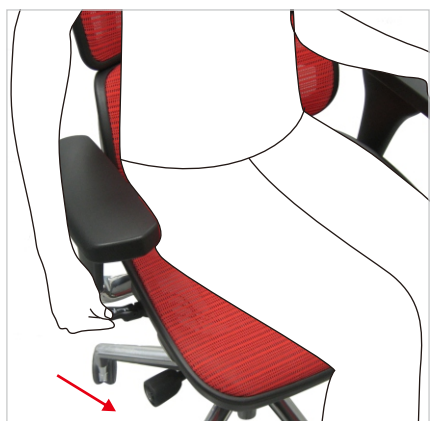

#### D2 SEAT DEPTH ADJUSTMENT

While seated, push the single rod control lever forward to adjust the seat depth. The range of movement for the seat is approximately 1.97". When your desired seat position is achieved, return the lever to the original middle position to lock your seat position into place.



# ERGOHUMAN 2

## USER GUIDE



 
DISCOVER OPERATION  
GUIDE VIDEO



### CHAIR PARTS TOOLS



ALLEN  
WRENCH



A FOR  
ARMREST

(SPARE)  
1/4" x 5/8"

B FOR  
BACKREST

(SPARE)  
M8x15mm

### ASSEMBLY STEPS

