
IN HOUSE ASSEMBLY TEMPLATE

# MOBILE LAB UNITS

4111, 4121, 4222, 4332, 4342, & 4352 SERIES (OAK OR MAPLE) ASSEMBLY INSTRUCTIONS

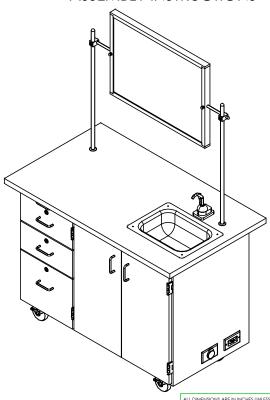

### NOTE:

1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

CREATED ASSEMBLY INSTRUCTIONS 1/29/18 EMK REV. DESCRIPTION DATE NAME

	ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE	DWN BY:	EMK	DATE DWN:	1/29/18
	CABINET SQUARENESS = ± .0625 FRACTIONAL VALUES = ± 1/32" - ALL VALUES ± OVERALL -	APR BY:		DATE APR:	
		APR BY:		DATE APR:	

CONFIDENTIAL:

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED
IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOF ARE THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.

THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIFIED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.



300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com

MOBILE LAB UNITS ASSEMBLY INSTRUCTIONS

SCALE: SHEET: REVISION: MOBILE LAB UNITS 1 OF 9 REV A NTS

IN HOUSE ASSEMBLY TEMPLATE

## **TOOLS REQUIRED** ½" WRENCH **ADJUSTABLE PLIERS SCREW DRIVER**

ASS	ASSEMBLY COMPONENTS				
ITEMS INCLUDED	PART#	PART DESCRIPTION	QTY		
CASTERS	100081	CASTER,4IN SWIVEL TOP PLATE, W/BRAKE	4		
CASTER HARDWARE KIT	206509	CASTER,ASSY,HDWRE,16-SCREWS, 16-NUTS	1		
**EXTENSION CORD**	100036 ELECTRICAL EXTENSION CORD		1		
**HAND PUMP**	100013	PUMP,ROCKET HAND RP800	1		
**TUBING**	100015	TUBING,3% FOR HAND PUMP	2.5		
**CROSS BAR**	100007	ROD,CROSSBAR ½ DIA.X 40L	1		
**UPRIGHTS**	100004	ROD,UPRIGHT ¾ DIA.X 40L	2		
**CLAMP\$**	100003	rod clamp ½x¾ assy	2		
**WATER JUGS**	100118	WATER JUG,2 1/2 GAL RECTANGULAR	2		
**GOOSE NECK FIXTURE**	222830	FIXTURE,L081-55WSA GSNCK W/ FLANGE	1		

### NOTE:

- 1. COMPONENTS VARY WITH STYLE OF MOBILE CABINET PURCHASED.
- 2. \*\*XX\*\* INDICATES ITEMS THAT MAY NOT COME WITH UNIT (DEPENDING ON MODEL PURCHASED).

Α	CREATED ASSEMBLY INSTRUCTIONS	1/29/18	EMK	-			
REV.	DESCRIPTION	DATE	NAME	ECN NO.			
REVISION LEVEL							

ALL DIMENSIONS ARE IN INCHES UNLESS NOTED OTHERWISE	DWN BY:	EMK	DATE DWN:	1/29/18
CABINET SQUARENESS = ± .0625	APR BY:		DATE APR:	
FRACTIONAL VALUES = ±1/32" - ALL VALUES ± OVERALL -	APR BY:		DATE APR:	

CONFIDENTIAL:
ALL DESIGN RIGHTS RESERVED
THE INFORMATION, DATA, DESIGN, AND DRAWINGS EMBODIED
IN THIS DOCUMENT AND ALL REPRODUCTIONS THEREOR ATTER
THE EXCLUSIVE PROPERTY OF DIVERSIFIED WOODCRAFTS, INC.


THESE DOCUMENTS ARE SUPPLIED WITH THE UNDERSTANDING THAT THEY WILL NOT BE DISCLOSED TO THIRD PARTIES WITHOUT WRITTEN CONSENT OF DIVERSIRED WOODCRAFTS, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT WRITTEN CONSENT IS SUBJECT TO LEGAL ACTION.





300 South Krueger Street Suring, WI 54174 diversifiedwoodcrafts.com


MOBILE LAB UNITS TOOLS AND ASSEMBLY COMPONENTS


SCALE: SHEET: REVISION: MOBILE LAB UNITS 2 OF 9 REV A NTS

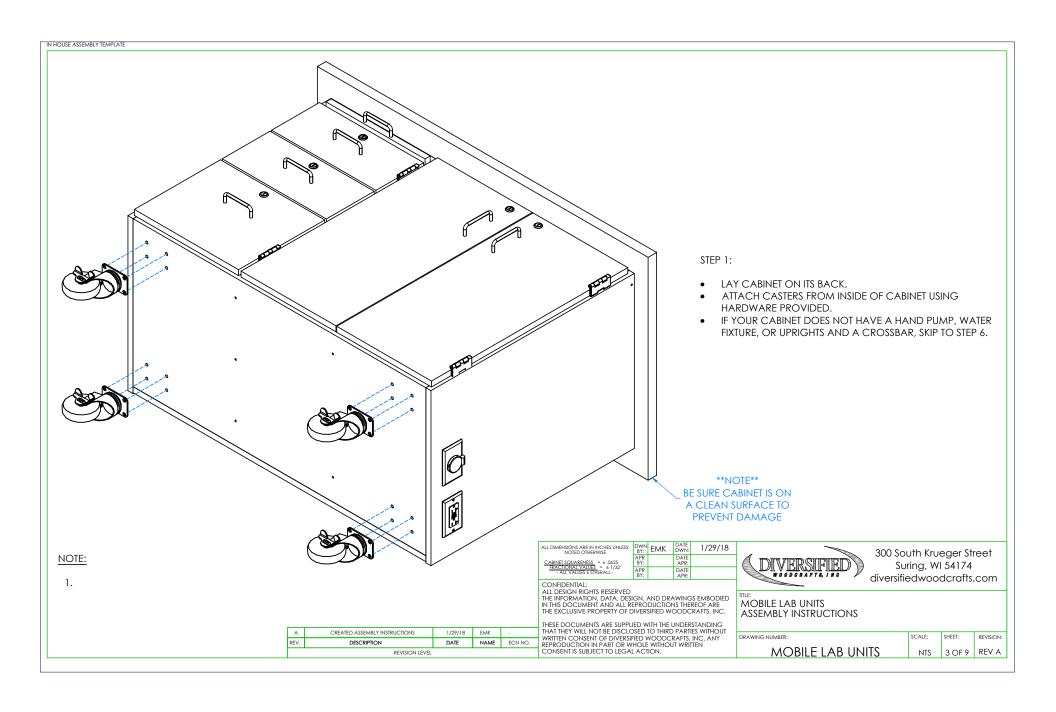


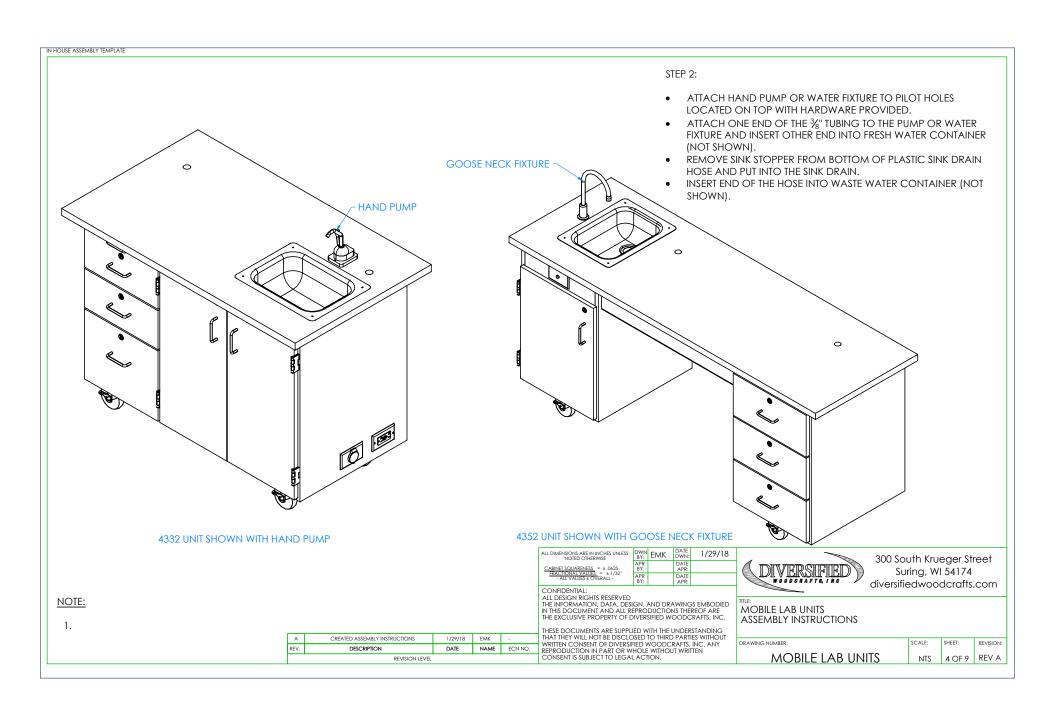

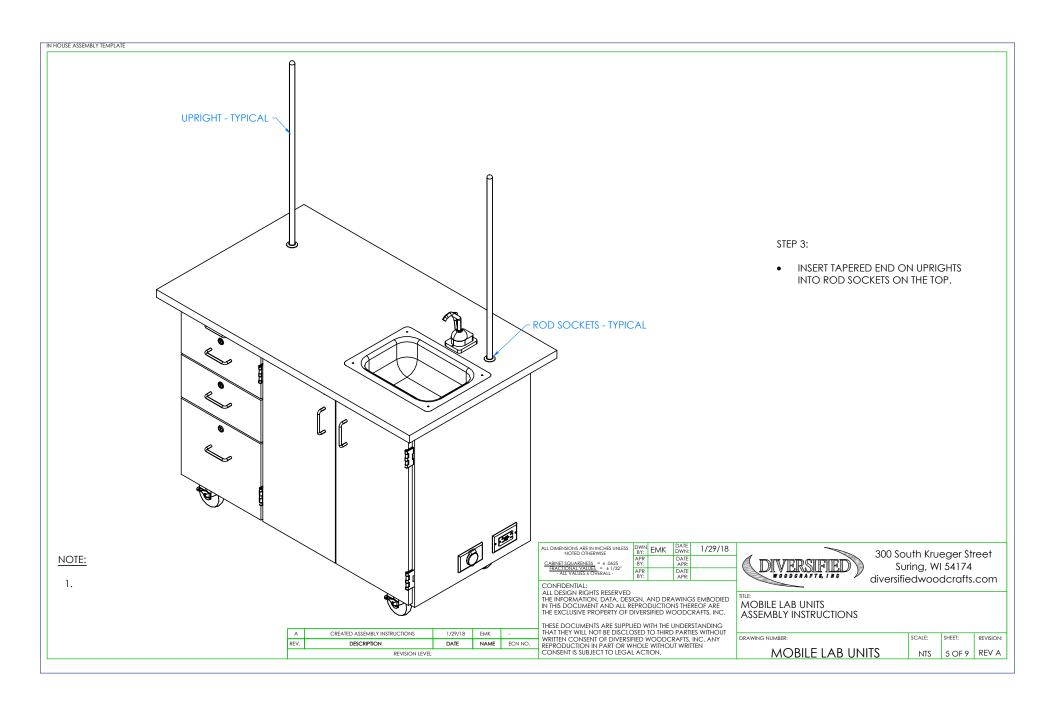

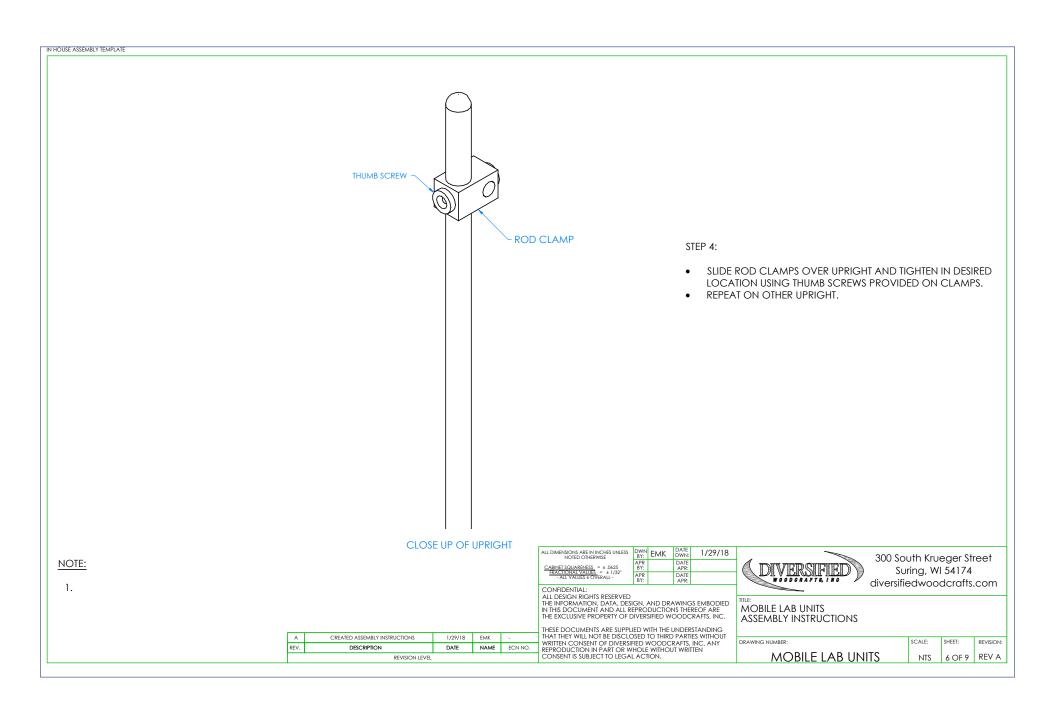

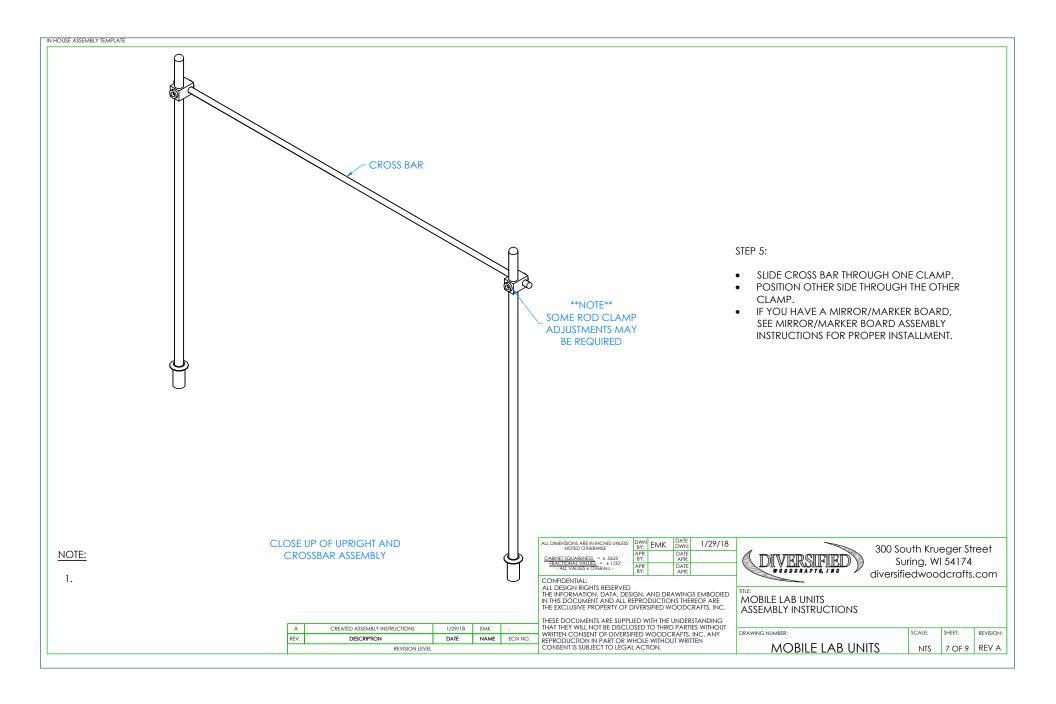

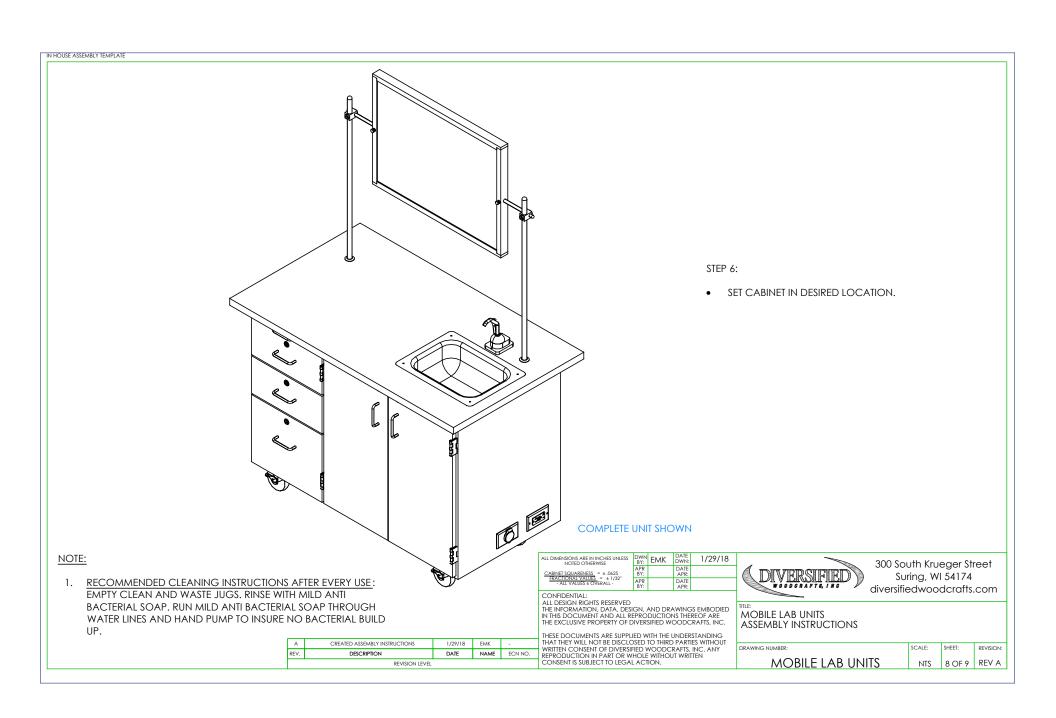

## TROUBLESHOOTING YOUR GFCI ELECTRICAL RECEPTACLE:

<u>PLEASE NOTE: THROUGHOUT ANY OF THE FOLLOWING STEPS (PROCEDURES); IF YOU ARE NOT SURE YOU CAN DO THIS JOB SAFELY, AND COMPETENTLY, REFER THIS WORK TO QUALIFIED PROFESSIONAL!</u>

If your unit comes equipped with a GFCI (Ground Fault Circuit Interrupter) electrical receptacle, and there is no power in the receptacle please consider/check the following:

- The extension cord (if being used) is working properly.
- The breaker hasn't been tripped, or turned off.

This type of GFCI has two testing-related buttons on it. One button is appropriately labeled "TEST", and the other button is labeled "RESET". To test the GFCI receptacle follow these steps:

- Plug in an appliance (lamp or night light) into the outlet. The light should now be on. Then press the "TEST" button on the GFCI. The GFCI "RESET" button should pop out, and the light should go out.
- If the "RESET" button pops out, but the light doesn't go out, the GFCI has been improperly wired. In this case please contact a certified professional. There may also be a problem with other wiring in the same circuit.
- If the "RESET" button doesn't pop out, the GFCI is defective, or malfunctioned, and should be replaced.
- If the GFCI is functioning properly, and the lamp goes out, press the "RESET" button to restore power to the outlet.

Conversely, if you have a GFI that has tripped (which is common) and it will not reset, you may have a wiring short in the circuit, a defective appliance on the circuit, or the GFI itself has become defective. To test a tripping GFCI follow these steps:

- Remove every appliance connected to the GFCI's circuit and reset it. If it doesn't reset there may either be a wiring fault behind a socket outlet, or your GFCI itself has become faulty.
- Make sure whatever you are plugging into to the GFCI is dry and not damaged.
- Only plug in one item at a time. If you are plugging in a defective item it will cause the GFCI to trip, and that item therefore should be replaced.

If you are still having difficulty the easiest way to troubleshoot a GFI is to obtain a GFI tester, which is available at most hardware stores. It plugs into the GFI outlet, and will supply you with a "snapshot" of your connections, indicating wiring problems and/or the condition of the GFI. Another way to troubleshoot is to simply purchase a new GFI and install it.