


Mobile Ductless Fume Hood with Oak Storage Cabinet SMS-01-V102-1850

1800 (OAK OR MAPLE)
ASSEMBLY INSTRUCTIONS

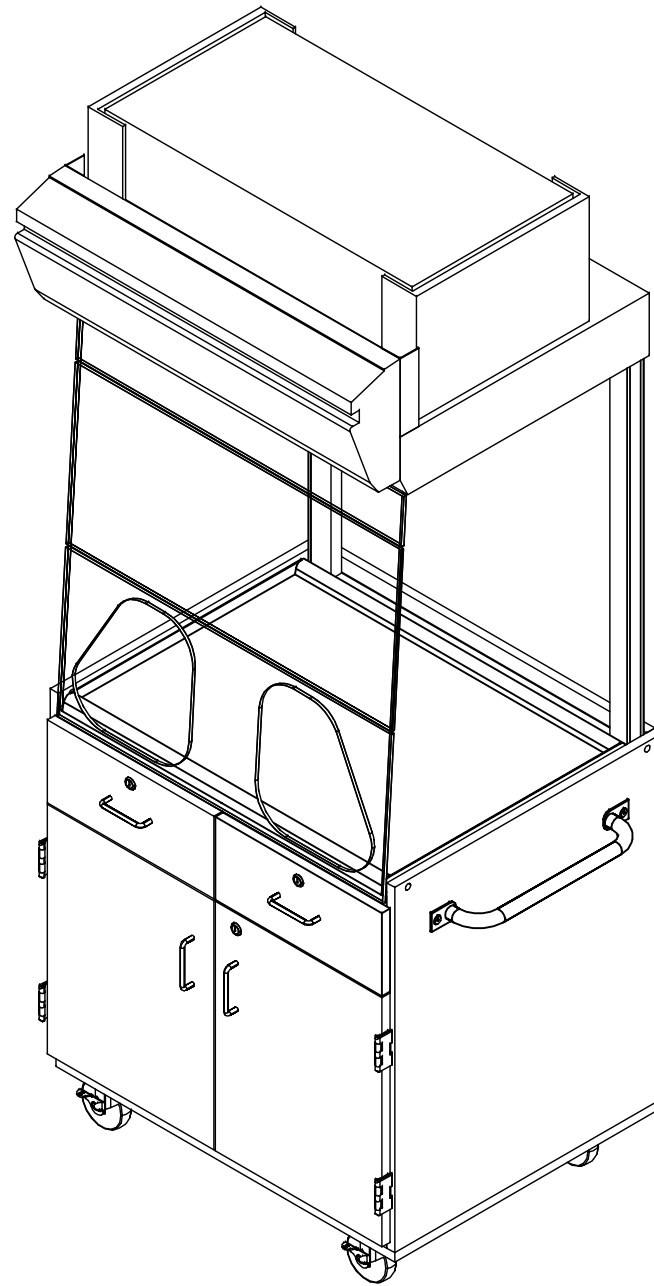


NOTE:

1. MODEL VIEWS MAY NOT REPRESENT EXACT MODEL PURCHASED

TOOLS REQUIRED
SCREW DRIVER
4MM ALLEN WRENCH
5MM ALLEN WRENCH

ASSEMBLY COMPONENTS			
ITEMS INCLUDED	PART #	PART DESCRIPTION	QTY
CABINET	N/A	CABINET WITH CASTERS - 32.375"W X 27.25"D X 36"H	1
METAL HANDLE	259713-X	HANDLE,STEEL,PUSH/PULL,18.50X3.25X 1.50	1
CONNECTING BOLT	259537	BOLT,1/4-20X0.708,CONNECTOR BOLT	2
CONNECTION NUT	234337-JCN	JOINT CONNECTING NUT,1/4-20X17MM	2
FUME HOOD - SHELL	259810	FUME HOOD SHELL FOR 1800 SERIES	1
FUME HOOD - WORK SURFACE	259826	FUME HOOD WORK SURFACE FOR 1800 SERIES	1
FUME HOOD - BACK PANEL	259827	FUME HOOD BACK PANEL FOR 1800 SERIES	1
FUME HOOD - FILTER	253560-X	FUME HOOD FILTER FOR 1800 SERIES	VARIES
SCREWS - FUME HOOD	236008	SCREW,THUMB,SS M8 38MM KNURLED	4



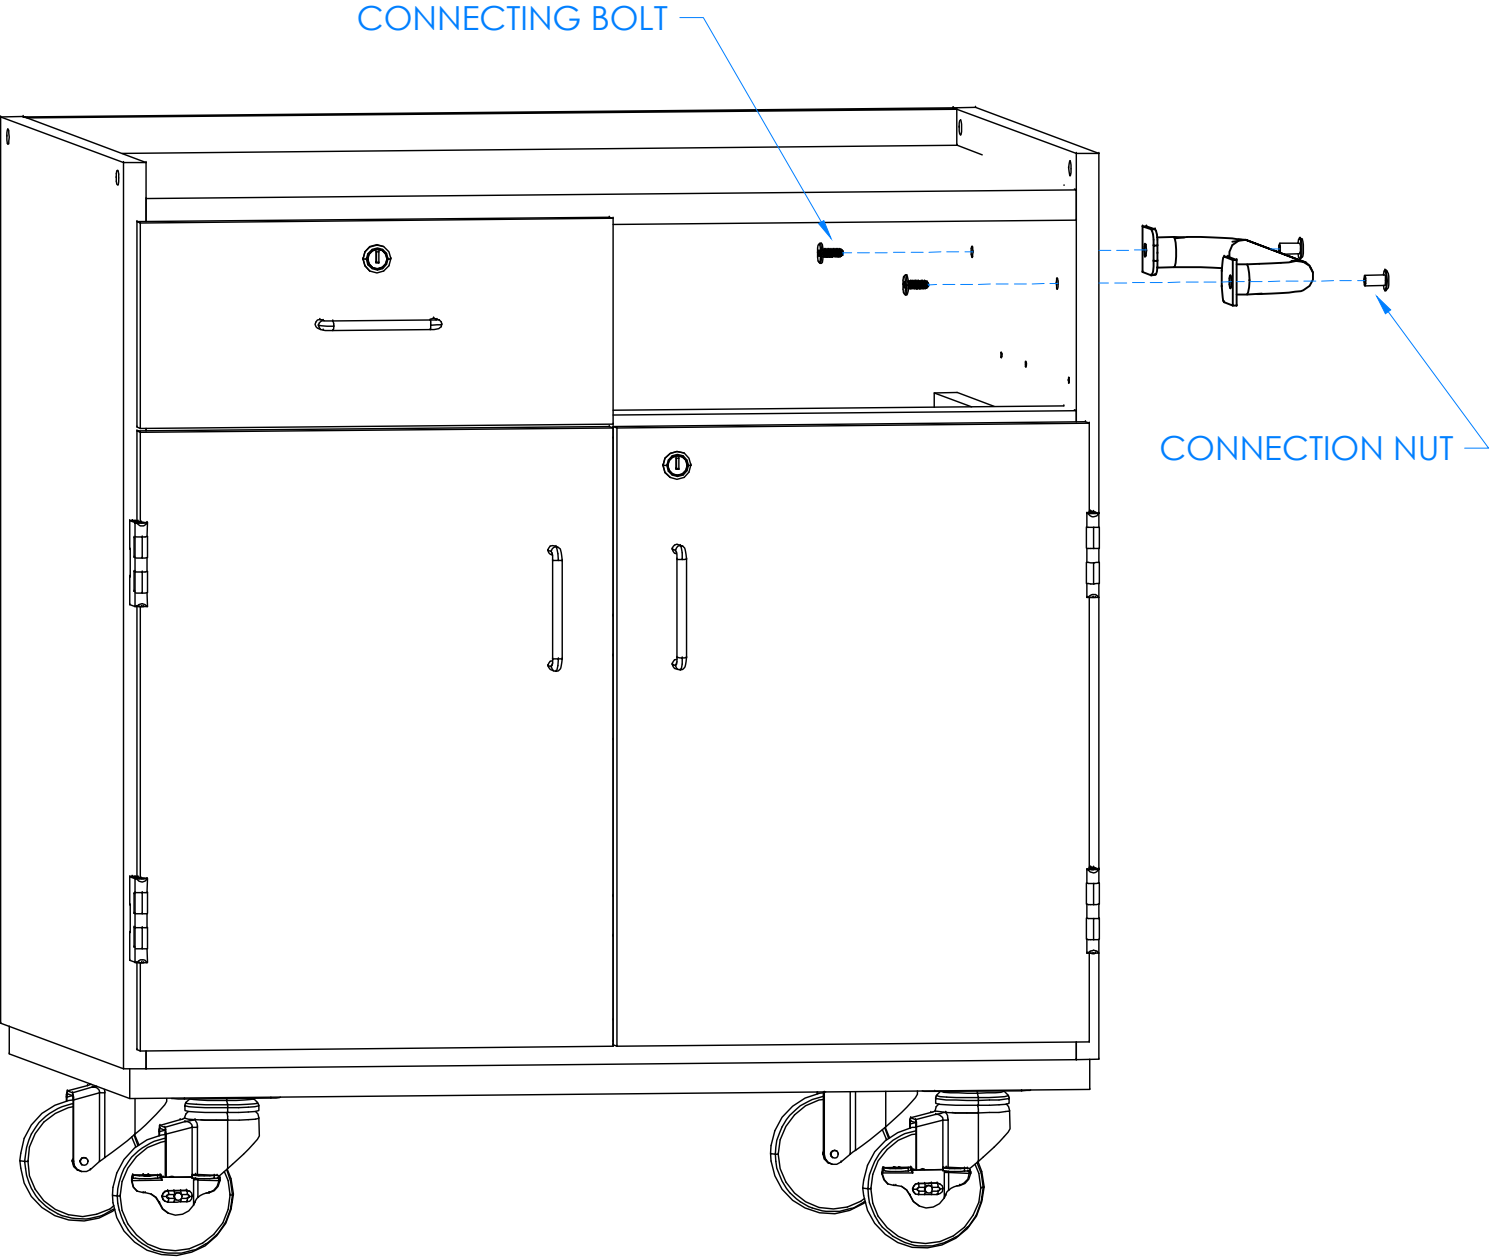


HARDWARE REQUIRED FOR STEP

QTY	DESCRIPTION	PART NUMBER
1	METAL HANDLE	259713-X
2	CONNECTING BOLT	259537
2	CONNECTION NUT	234337-JCN

STEP 1:

- a. REMOVE RIGHT SIDE DRAWER FROM CABINET AND SET ASIDE.
- b. ATTACH METAL HANDLE TO CABINET USING PROVIDED HARDWARE LISTED ABOVE.
- c. REPLACE RIGHT SIDE DRAWER IN CABINET.



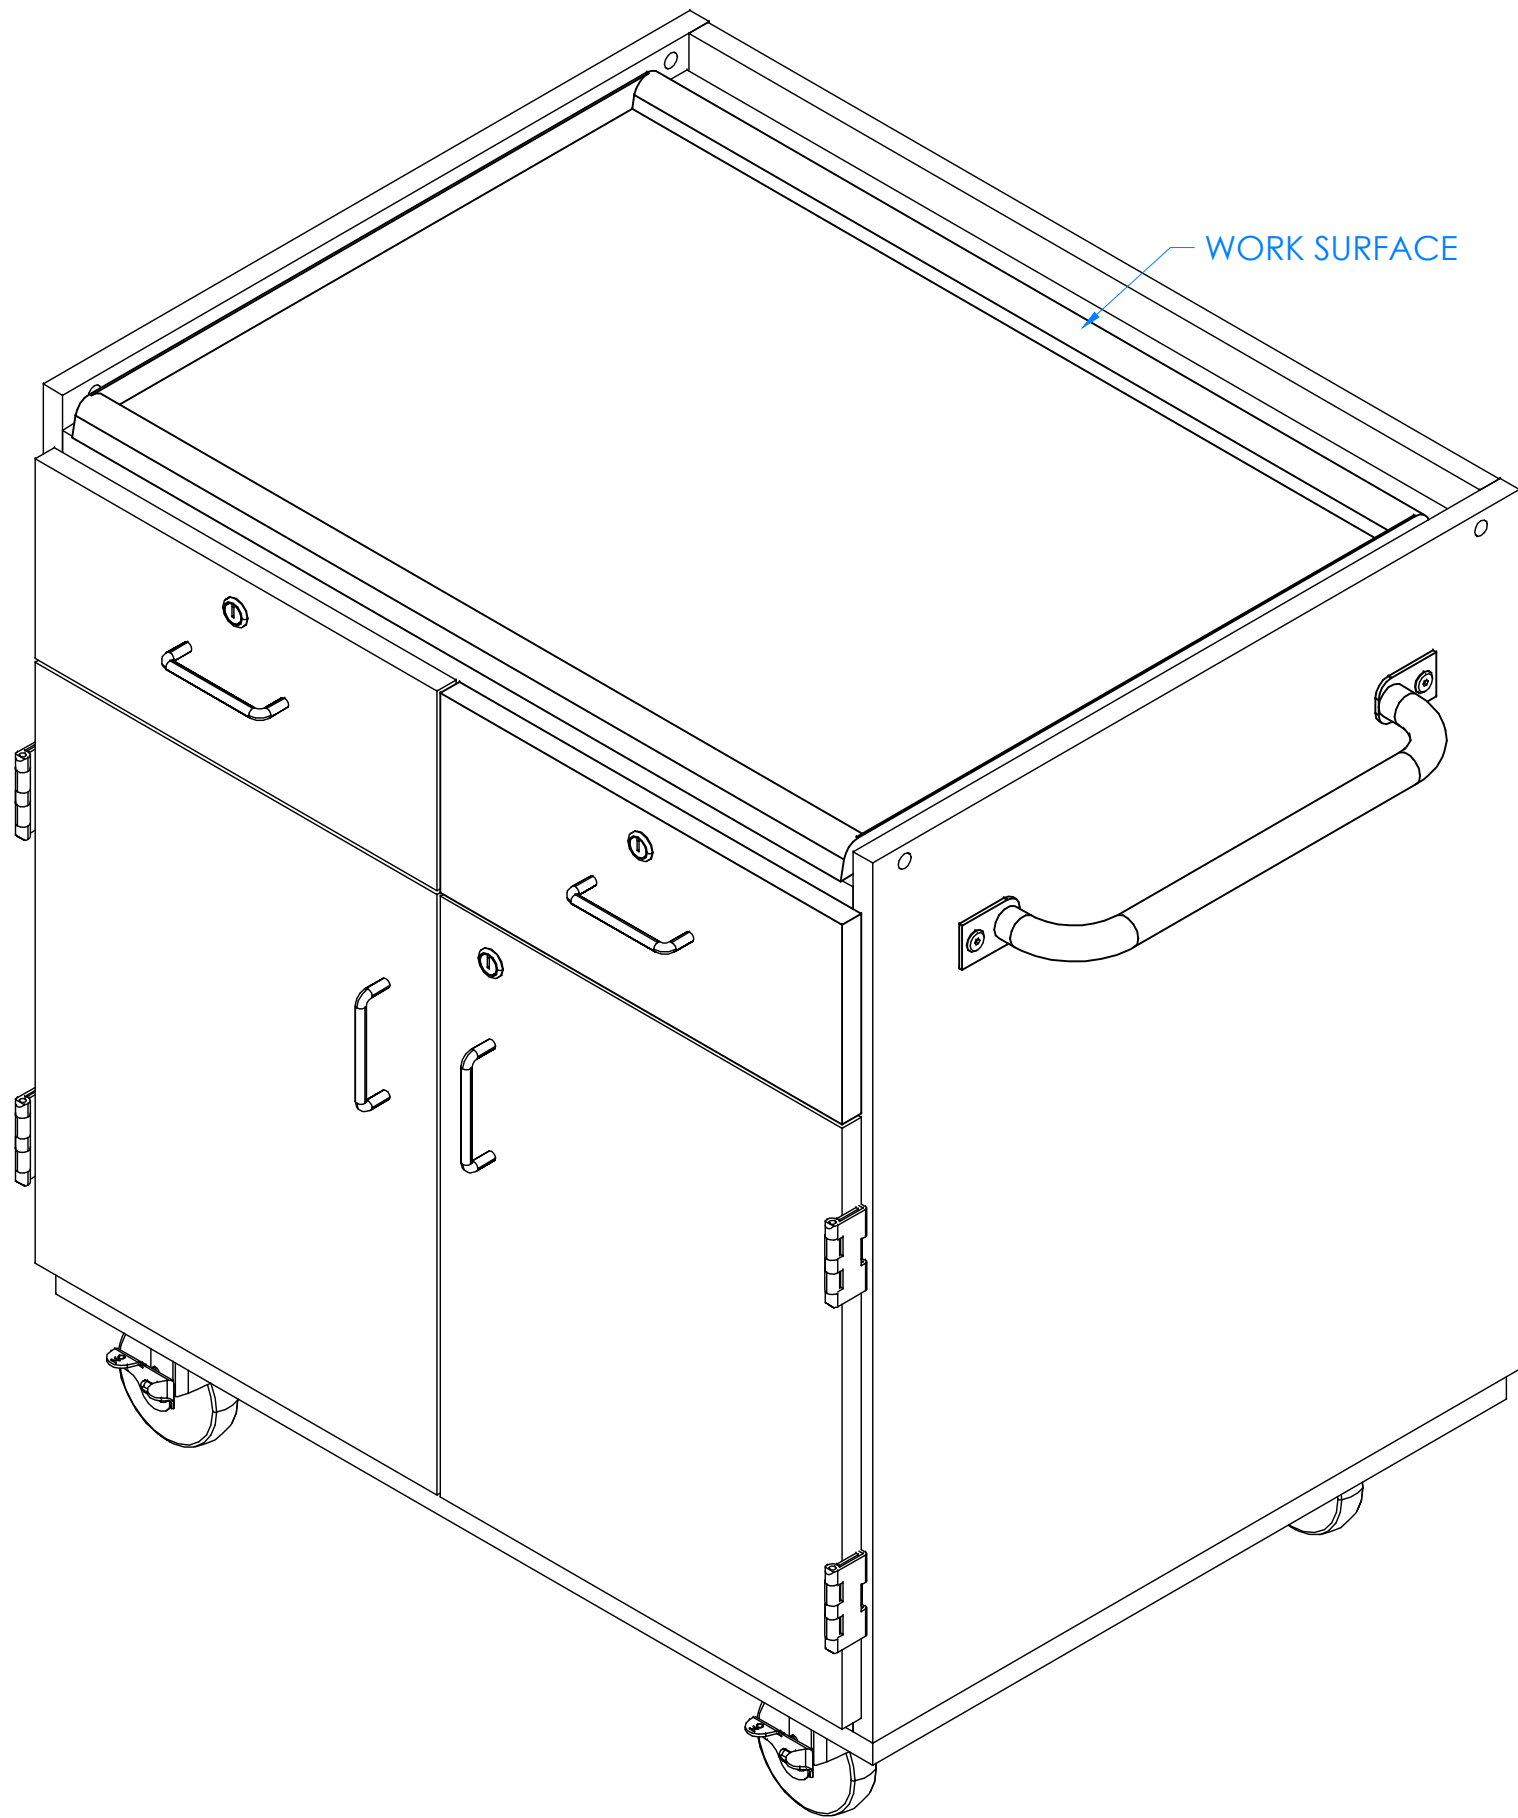


HARDWARE REQUIRED FOR STEP

QTY	DESCRIPTION	PART NUMBER
1	CABINET	N/A
1	FUME HOOD - WORK SURFACE	259826

- STEP 2:
- α. PLACE FUME HOOD WORK SURFACE ON TOP OF CABINET FIRST TO INSURE PROPER ALIGNMENT.



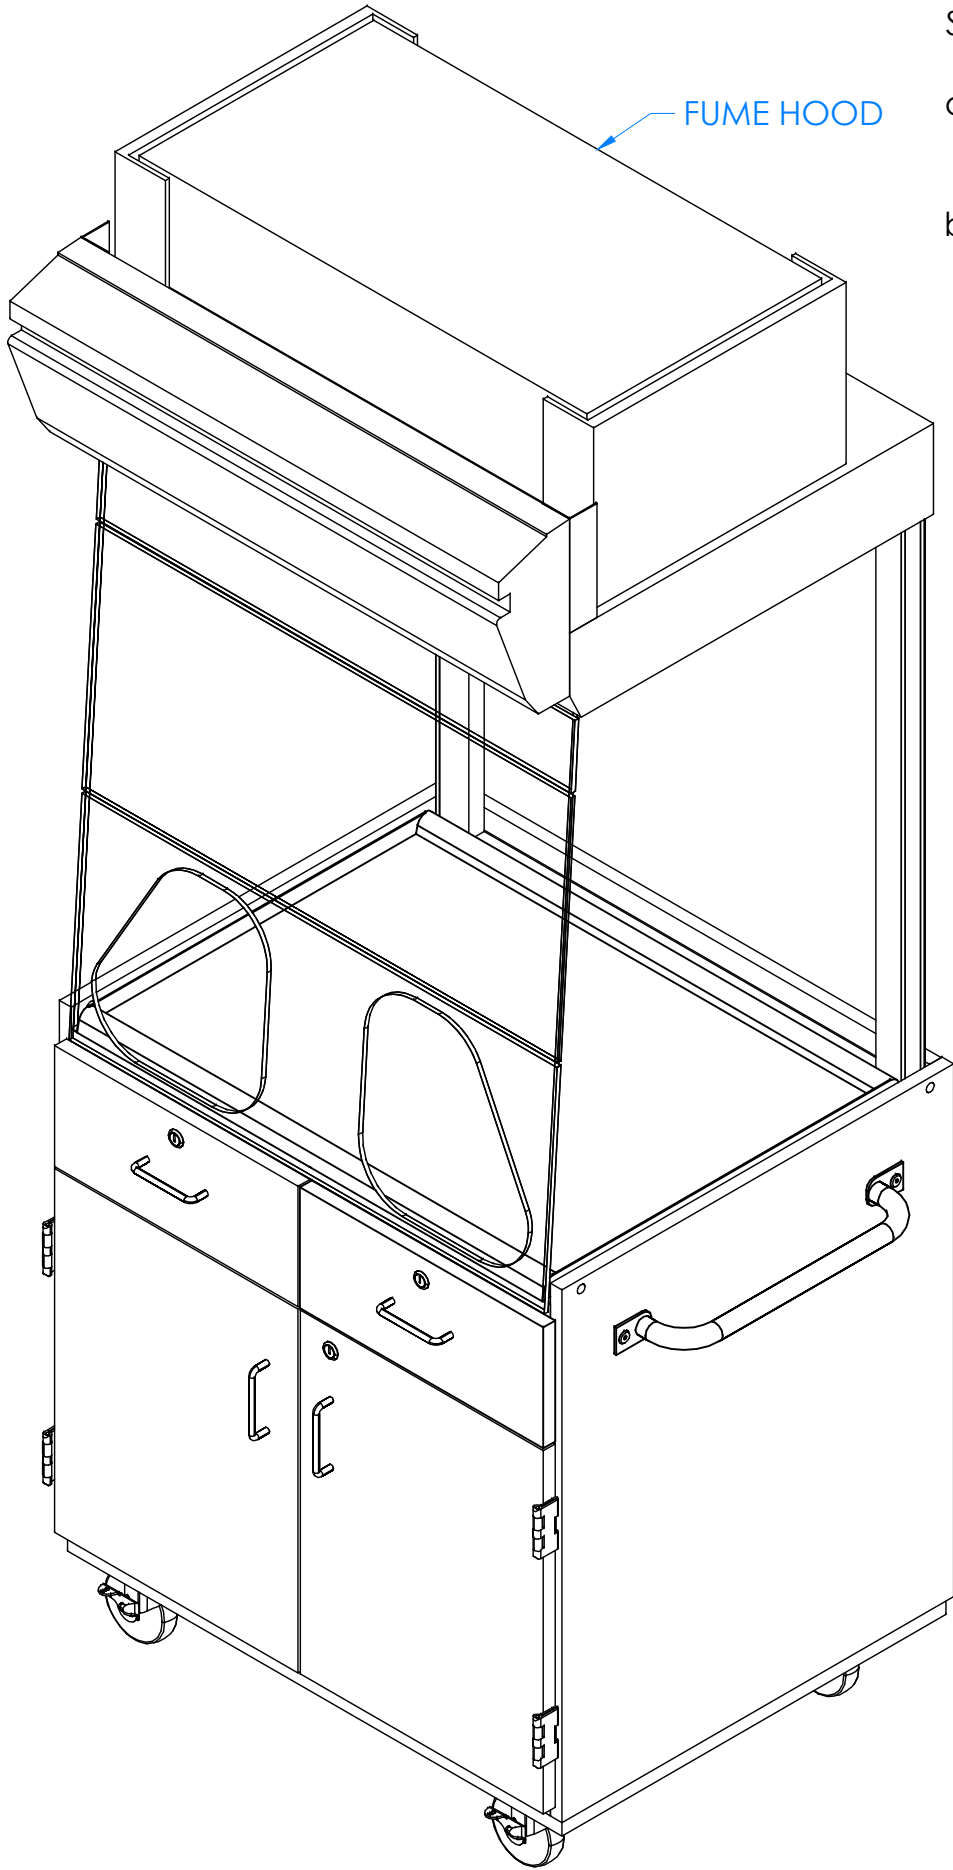


STEP 3:

- a. ASSEMBLE FUME HOOD PER ENCLOSED ASSEMBLY INSTRUCTIONS CD, AND/OR ASSEMBLY INSTRUCTIONS WITH THE FUME HOOD.
- b. ONCE INSTALLED, ATTACH FUME HOOD ASSEMBLY TO CABINET SIDES USING HARDWARE PROVIDED.


HARDWARE REQUIRED FOR STEP

QTY	DESCRIPTION	PART NUMBER
1	FUME HOOD - SHELL	259810
1	FUME HOOD - BACK PANEL	259827
VARIES	FUME HOOD - FILTER	253560-X
4	SCREWS - FUME HOOD	236008

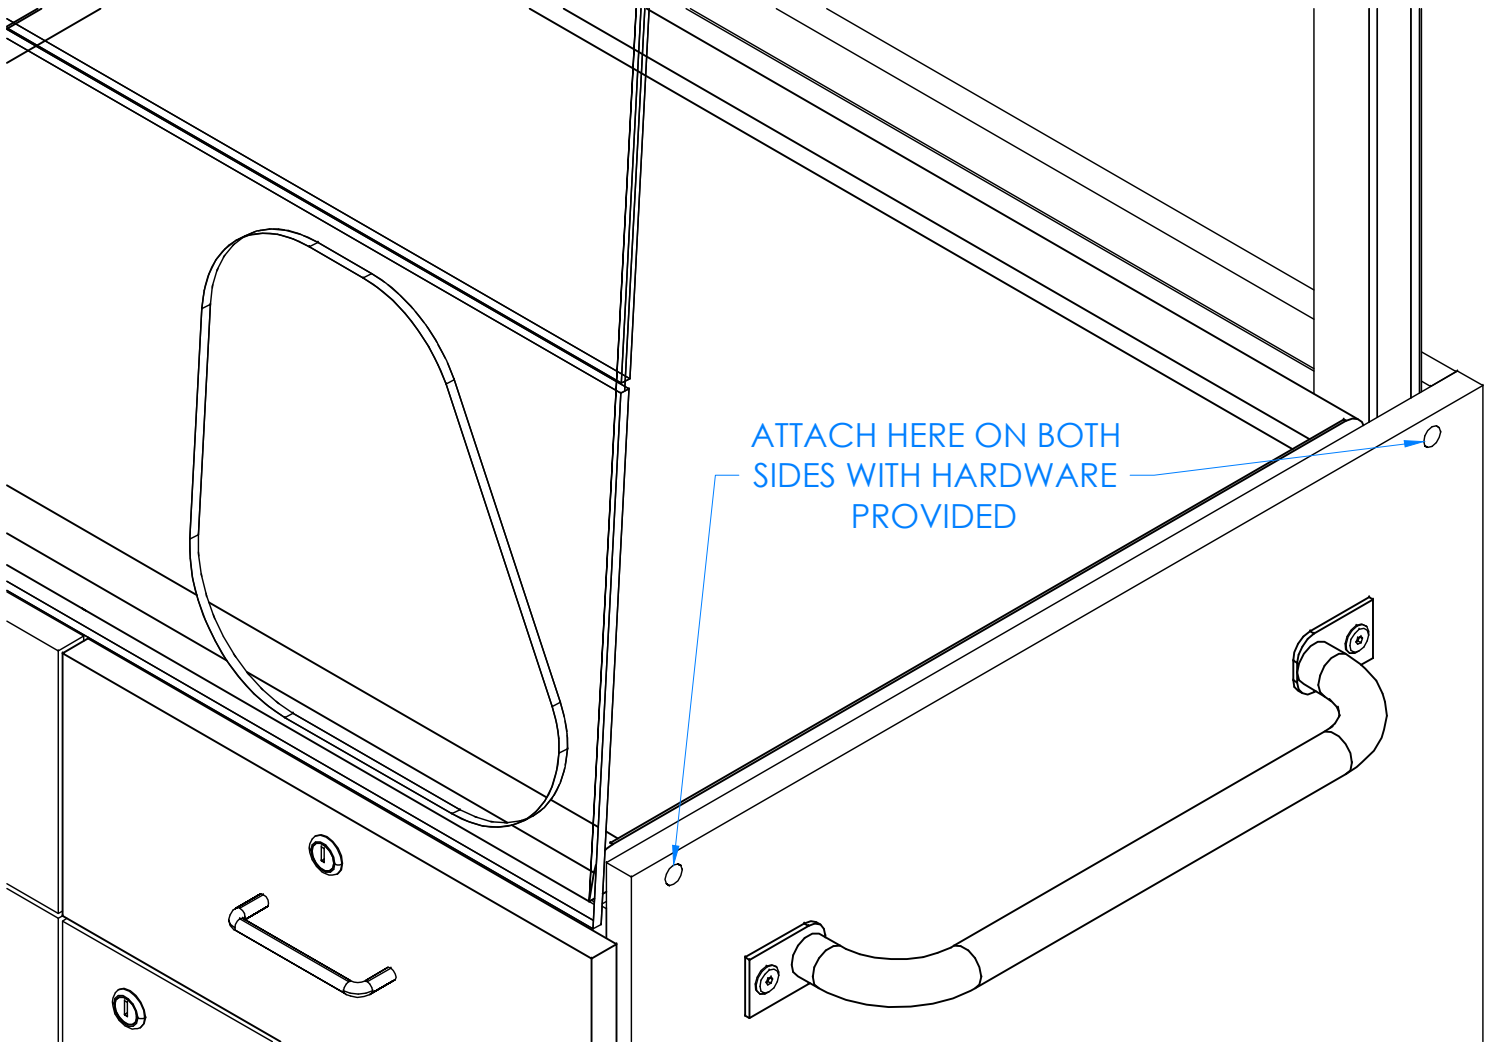

CLOSE UP OF RIGHT SIDE SHOWN



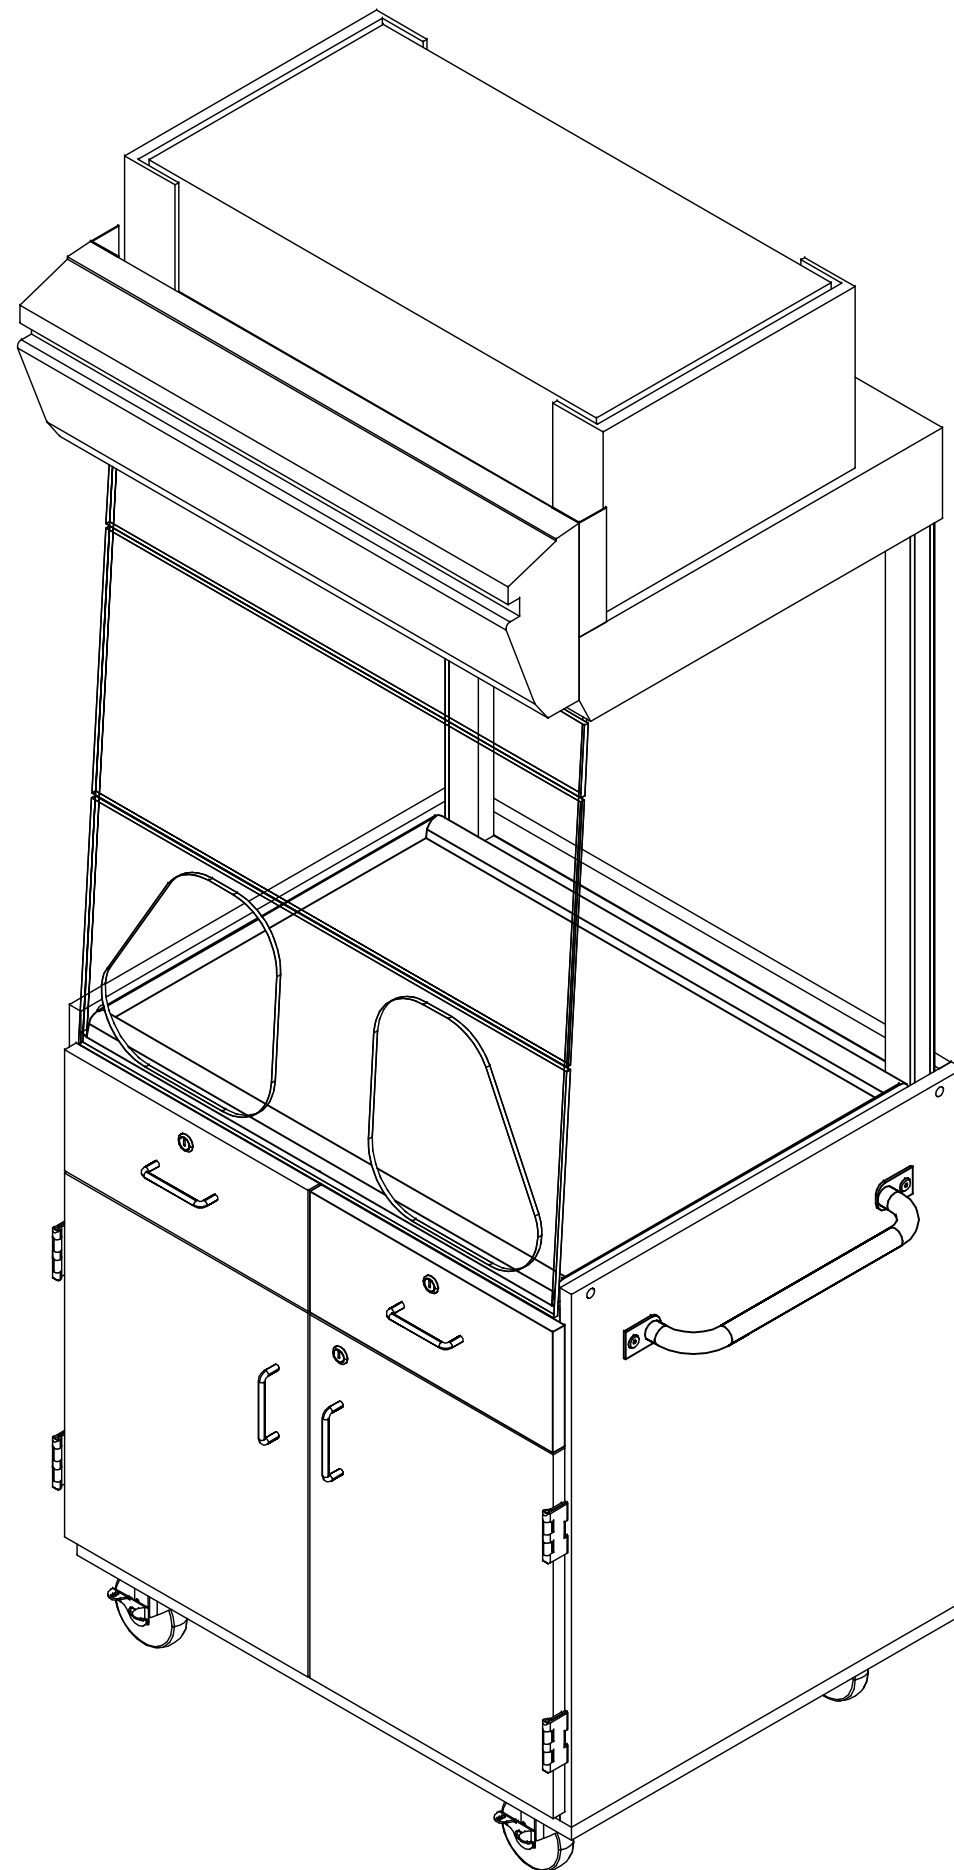

STEP 4:

α. PLACE CABINET IN DESIRED LOCATION.

COMPLETE UNIT SHOWN

