



Metal Storage Locker Assembly Guide


SMS-05-V39-UH

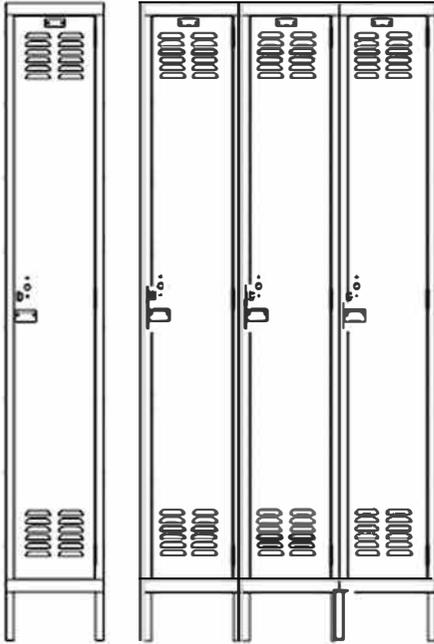

1 WIDE 3 WIDE SINGLE
TIER

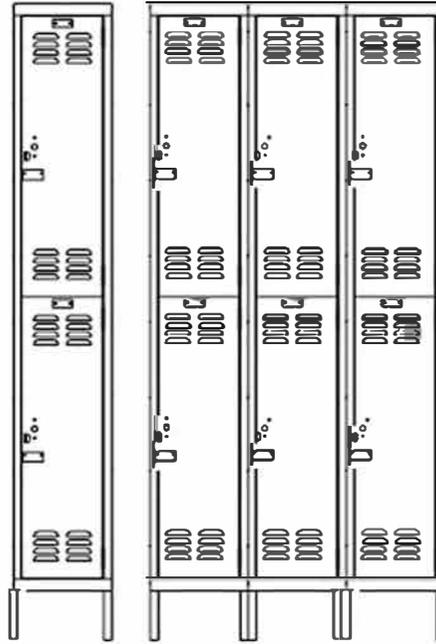

1 WIDE 3 WIDE DOUBLE
TIER

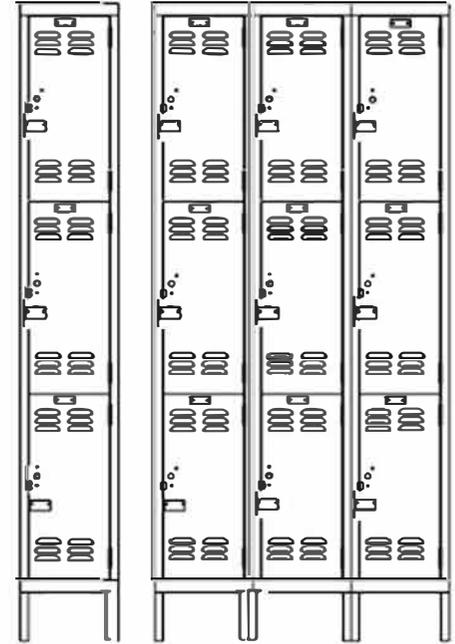

1 WIDE 3 WIDE TRIPLE
TIER

General Instructions


1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.
5. Items with suffix (xx) are available options.

CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL FOR SAFETY.
HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK GLOVES WHEN ASSEMBLING LOCKERS.
INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.



PACKAGE CONTENTS
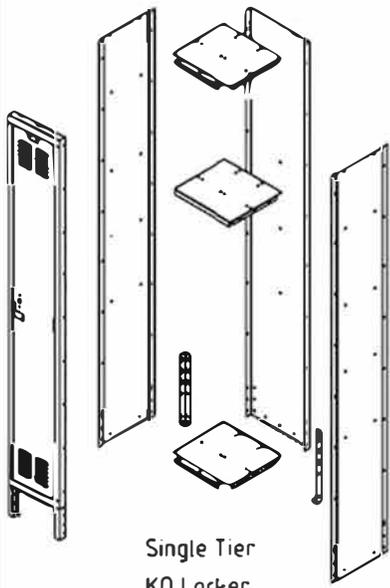
| REF. NO. | DESCRIPTION | PART NO. | 1-WIDE QUANTITY | | | 3-WIDE QUANTITY | | | |
|----------|-----------------------|-------------|-----------------|--------|--------|-----------------|--------|--------|--|
| | | | 1-TIER | 2-TIER | 3-TIER | 1-TIER | 2-TIER | 3-TIER | |
| ① | REAR PANEL | KRwwhh | 1 | 1 | 1 | 3 | 3 | 3 |  <p>Single Tier KO Locker</p> |
| ② | RIGHT/LEFT SIDE PANEL | KPddhh | 2 | 2 | 2 | 4 | 4 | 4 | |
| ③ | TOP/BOTTOM SHELF | KSwwdd | 2 | 2 | 2 | 6 | 6 | 6 | |
| ④ | HAT SHELF | KHwwdd | 1 | 1 | 2 | 3 | 3 | 6 | |
| ⑤ | SINGLE CEILING HOOK | H5K | 2 | 4 | - | 6 | 12 | - | |
| ⑥ | DOUBLE CEILING HOOK | H7K | 1 | 2 | 3 | 3 | 6 | 9 | |
| **⑦ | COAT ROD BRACKET | **TRH 200 | **2 | **4 | - | **6 | **12 | - | |
| **⑧ | COAT ROD | **KCR | **1 | **2 | - | **3 | **6 | - | |
| ⑨ | DOOR FRAME ASSEMBLY | KDFwwhh-IFP | 1 | 1 | 1 | 3 | 3 | 3 | |
| *⑩ | DOOR | KDwwhh-IFP | 1 | 2 | 3 | 3 | 6 | 9 | |
| ⑪ | NUMBER PLATE | NPH | 1 | 2 | 3 | 3 | 6 | 9 | |
| ⑫ | NUMBER PLATE RIVET | RV101 | 2 | 4 | 6 | 6 | 12 | 18 | |
| ⑬ | 3/8" SLOTLESS BOLT | MBT200 | 62 | 74 | 70 | 134 | 166 | 188 | |
| ⑭ | HEX NUT | N201 | 60 | 70 | 64 | 128 | 154 | 170 | |
| ⑮ | HI-DOME CAP NUT | N110 | 2 | 4 | 6 | 6 | 12 | 18 | |
| ⑯ | BOX DOOR LATCH PULL | KBLP100 | 1 | 2 | 3 | 3 | 6 | 9 | |
| **⑰ | STRIKE PLATE | **SP100 | 1 | 2 | 3 | 3 | 6 | 9 | |
| ⑱ | REAR LEG | KLK | 2 | 2 | 2 | 2 | 2 | 2 | |
| *⑲ | BUMPER | KDB300 | 3 | 4 | 6 | 9 | 12 | 18 | |
| *⑳ | RIVET (HINGE) | RV102 | 6 | 8 | 12 | 18 | 24 | 36 | |

PART NUMBER SUFFIX SHOWS WIDTH, DEPTH, HEIGHT AND TIER CUSTOMER TO SPECIFY.

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS,
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-A

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B

- * SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY ⑨
- ** OPTIONAL ITEM

PART NO. LEGEND:


ww = WIDTH
dd = DEPTH
hh = HEIGHT (FRAME)
† = TIER

TOOLS REQUIRED: 3/8" NUT DRIVER (3/8" SOCKET MAY BE SUBSTITUTED)

TWO-YEAR WARRANTY

HALLOWELL K D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS



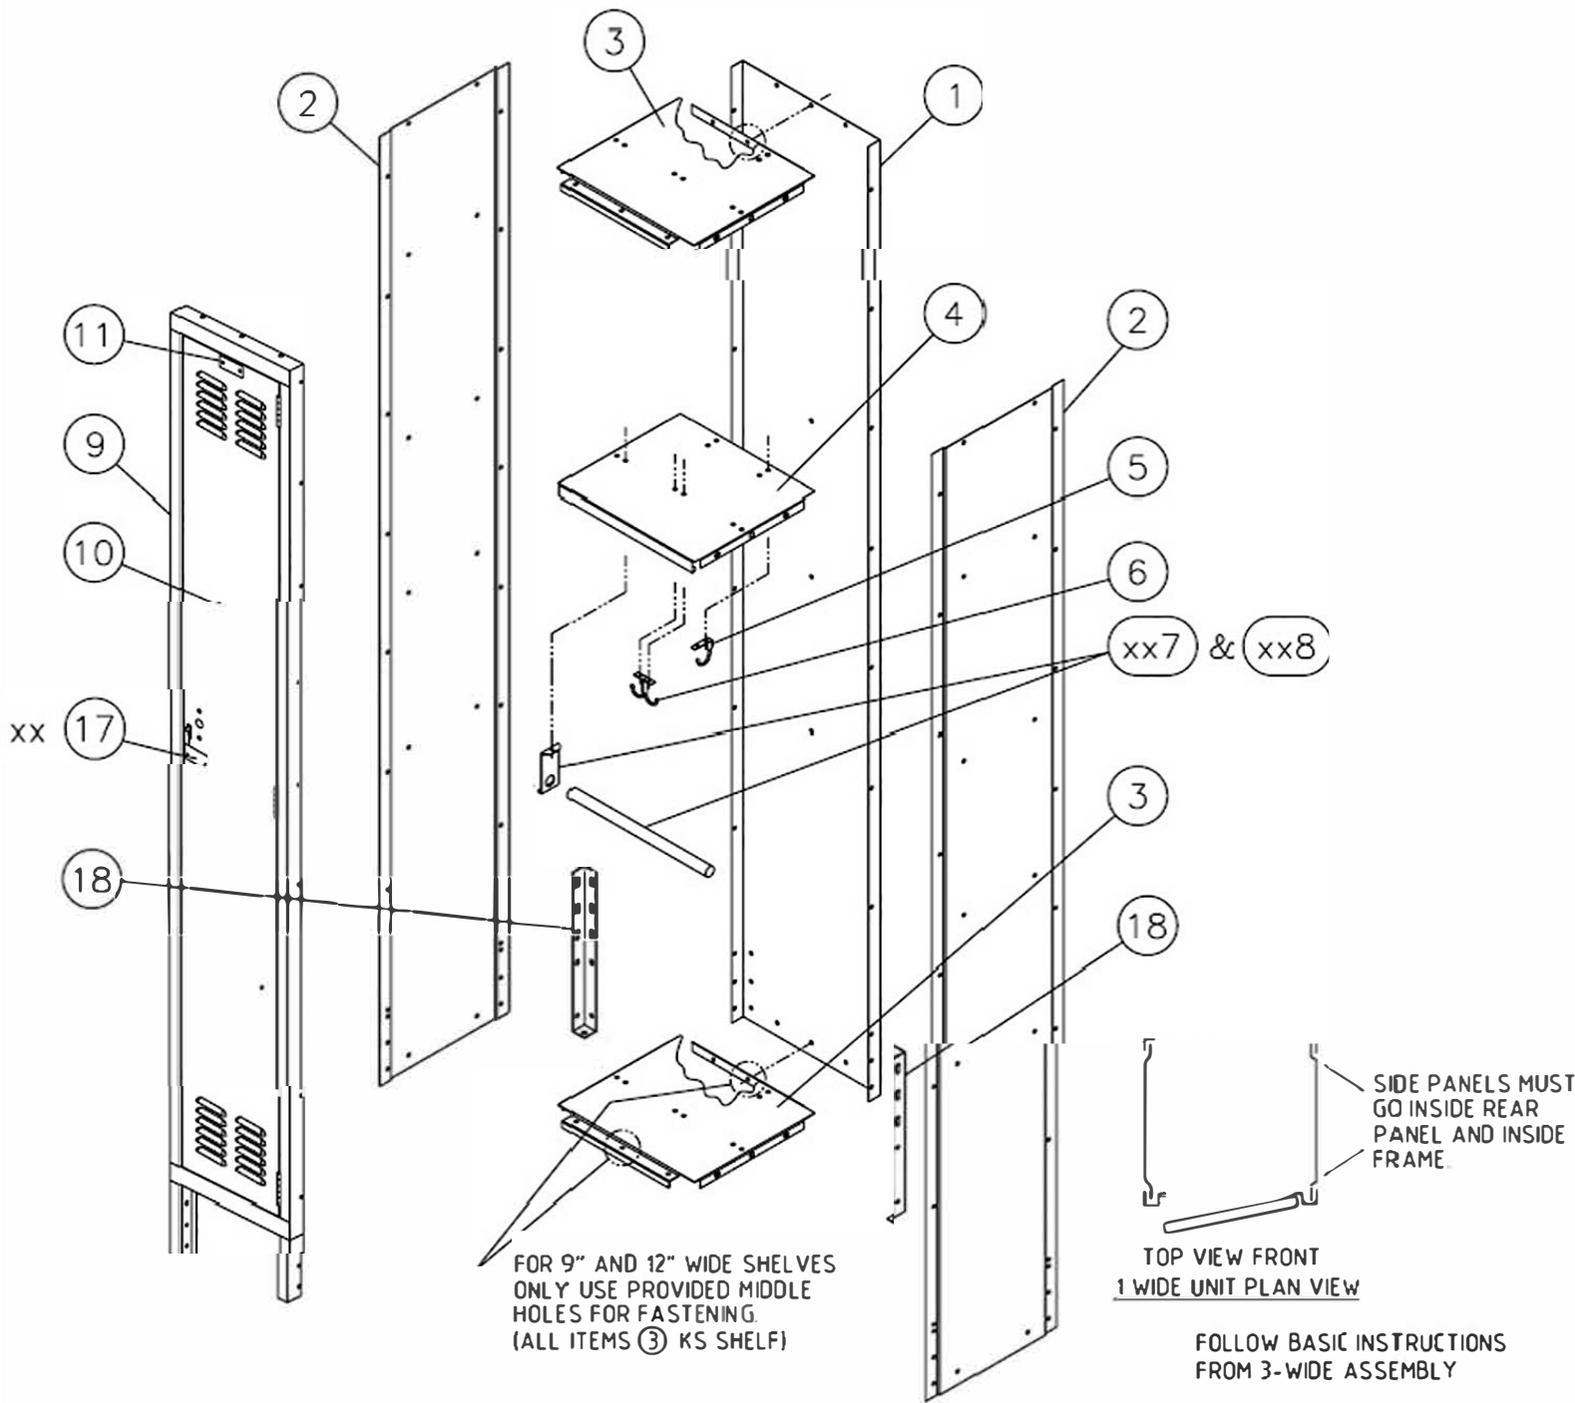

xx - OPTIONAL ITEMS

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST

COLOR

PURCHASE DATE






COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM


IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION



(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

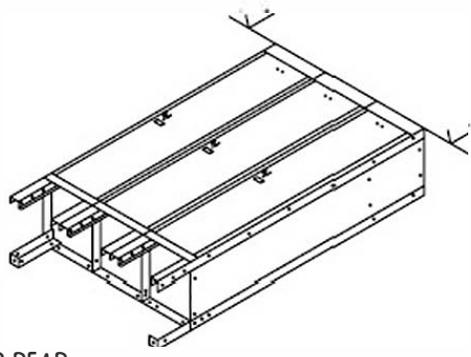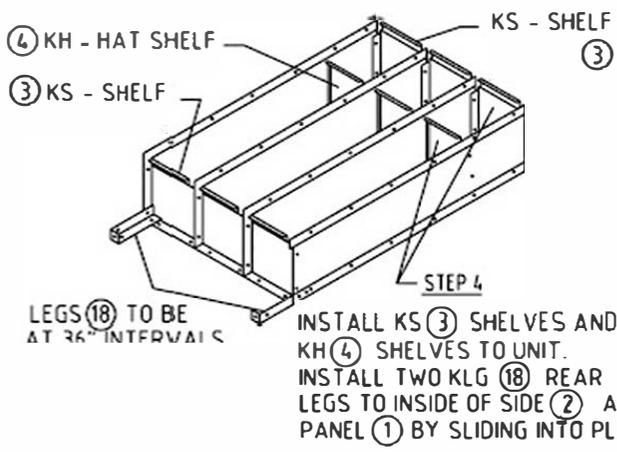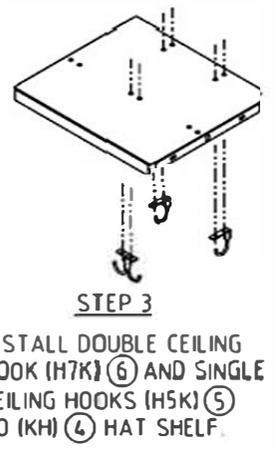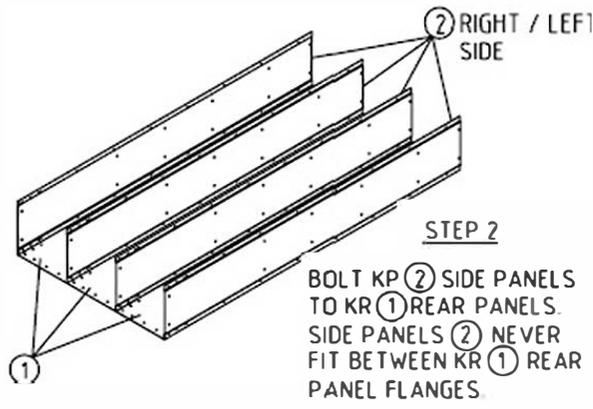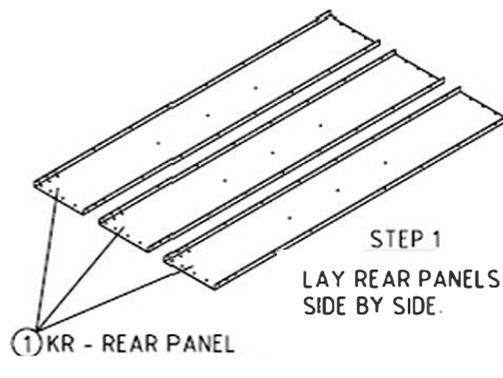


ASSEMBLY OF SINGLE ROW LOCKERS
NEVER PUT SIDE PANELS BETWEEN
FRAMES OR REAR PANELS.

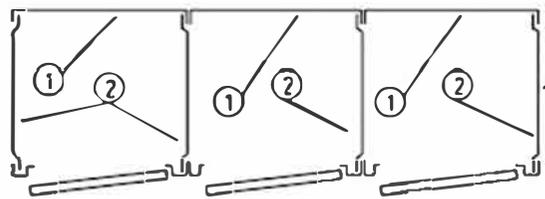



SIDE PANELS MUST
GO INSIDE REAR
PANEL AND INSIDE
FRAME.

SINGLE TIER EXAMPLE - 3 WIDE UNIT PLAN VIEW

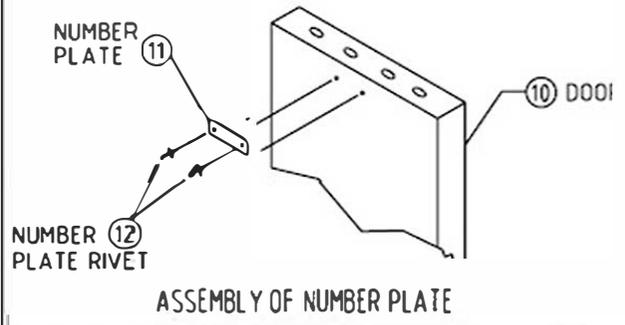

OPTIONAL COAT ROD
BRACKETS TO BE BOLTED TO UNDERSIDE
OF HAT SHELF WITH COAT ROD IN BETWEEN.

- ** ⑦ COAT ROD BRACKETS (**TRH 200)
- ** ⑧ COAT ROD (**KCRww)

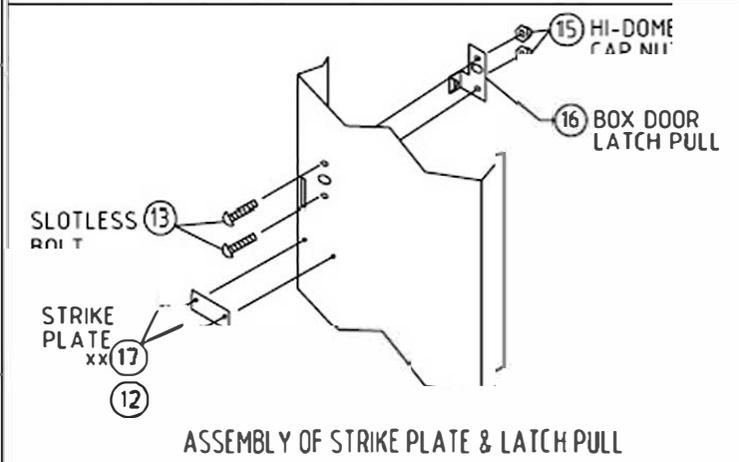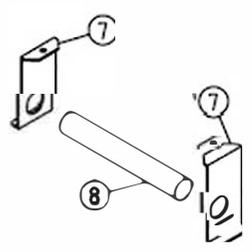

- ⑥ DOUBLE CEILING HOOK (H7K)
TO BE BOLTED TO
UNDERSIDE OF HAT SHELF.
- ⑤ SINGLE CEILING HOOK (H5K)
TO BE BOLTED TO
UNDERSIDE OF HAT SHELF.

