Stackable Cube Locker Assembly Guide SMS-05-V39-HC121212-1

General Instructions


- Check material received against the packing list. Check the number of packages received and then check the contents of each package.
- 2. Check the material received for damage. If damage has occurred, secure a "damage notation" from the carrier
- Identify each part as it is unpacked and put ke parts together as close as possible to the working area where they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.

CAUTION

In the interest of safety, all lockers must be securely anchored to the floor and/or wall. For safety, handle all components carefully and wear work gloves when assembling lockers. Install all u_its plumb and tighten all hardware securely. Retain instructions for future reference.



ITEM NO.	PART NUMBER	DESCRIPTION	QTY,
1	HCF\$1212/18	TOP/BOTTOM	2
2	HC\$P1212/18	SIDE PANEL	2
3	HCLF12-IFP	LATCH FRAME	1
4	KBLP100	DOOR PULL	1
5	LKD1272- 6DP/PL/SVP	DOOR	1
ó.	HCHF12-1	HINGE FRAME	1
7	HCBP1212	BACK PANEL	ij
8	KBTH101	LATCH	1
9	NPH100	NUMBER PLATE	Ţ
10	MBT200	BOLT	23
I, h	N201	NUT	21
12	N110	DOME NUT	22
13	MB1400	4-40 PHILLIPS	2
14.	N401	4-40 HEX NUT	2

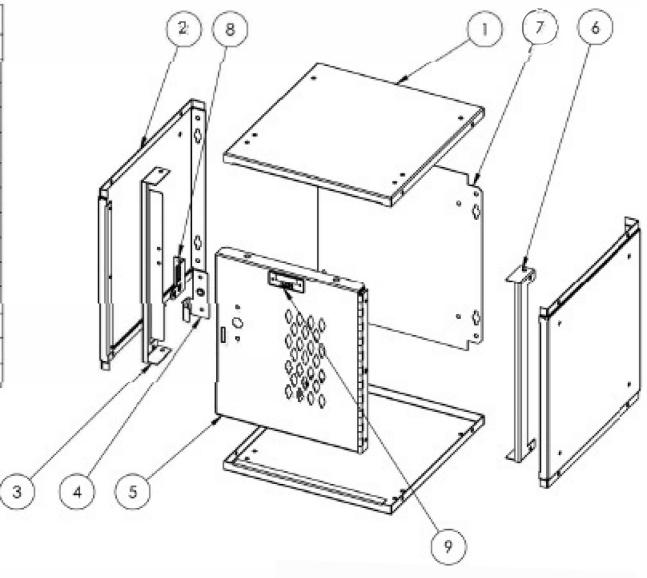






















STEP 1




STEP 2

Note: Balts and nuts should only be finger tight thoughout the assebly process.

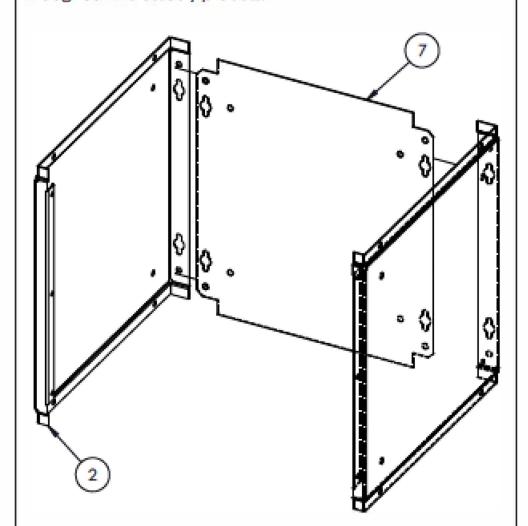

-Bolt side panels (HC\$P1212) and back (HCBP1212) together. Back is bolted to the insde of the unit.

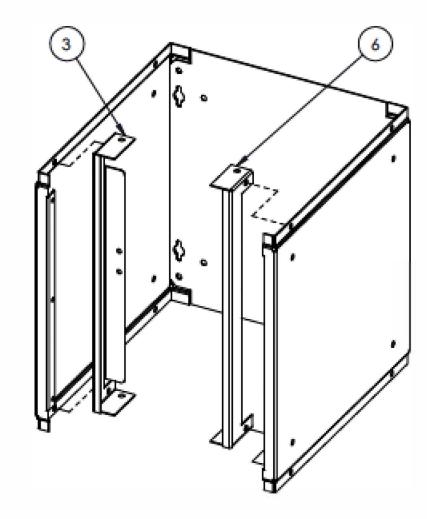

Insert left (HCLF12-1FP) frame and rigth (HCHF12-1) frame into the inside flanges of the side panel. Do not bolt yet!



