

Closed Back Shelving Assembly Guide

SMS-08-V39-SCB

CAUTION

IT IS THE RESPONSIBILITY OF THE PERSON ASSEMBLING THE SHELVING TO PROPERLY INSTALL ALL COMPONENTS AND HARDWARE AS SPECIFIED IN THESE INSTRUCTIONS AND ANY ACCOMPANYING DRAWINGS FOR SPECIFIC INSTALLATION.

- *INSTALL ALL REQUIRED SIDE AND BACK SWAY BRACES*
- *INSTALL FOOT PLATES AND SHIMS IF REQUIRED*
- *INSTALL ALL UNITS PLUMB*
- *TIGHTEN ALL HARDWARE SECURELY*

GENERAL INSTRUCTIONS

1. *These instructions are for the person who will actually supervise the assembly of the equipment covered by your order. -- Please see that they get them --*
2. *Check material received against the packing list. First check the number of packages received and then check the contents of each package.*
3. *Check material received for damage. If damaged, secure a "damage notation" from the carrier.*
4. *Identify each part as it is unpacked and pile like parts together and as close as possible to the working area in which they are to be assembled.*
5. *Lay out on the floor the space that each rack of shelving is to occupy and build each rack in its proper location.*
6. *Be careful to use the correct hardware as specified in the assembly instructions.*
7. *Make sure units are plumb before tightening sway braces and/or back panel bolts.*



HARDWARE SCHEDULE


<i>ITEM</i>	<i>Nuts & Bolts 1/4-20 x 1/2" lg.</i>	<i>Nuts & Bolts 1/4-20 x 1 1/4" lg.</i>	<i>Back Panel Clips Part No. 5120</i>	<i>Spring Clips Part No. 5260</i>
<i>Back Panels 3' 3"</i>	6		3	
<i>Back Panels 6' 3"</i>	8		4	
<i>Back Panels 7' 3" and 8' 3"</i>	10		4	
<i>Back Panels 10' 3"</i>	12		5	
<i>Shelf Reinforcing Channels</i>	3			
<i>Bin Fronts</i>		3		
<i>Base Strips</i>	3			
<i>Full Dividers (up to 18" deep)</i>				4
<i>Full Dividers (24" deep)</i>				6
<i>Partial Dividers (up to 18" deep)</i>				2
<i>Partial Dividers (24" deep)</i>				3
<i>Label Holders</i>				3
<i>Back Sway Braces</i>	5			
<i>Side Sway Brace</i>	5			

NOTE: All bolts are Truss Head type with hex type nuts.




PARTS BREAK-OUT


Shelf
Part No. 5138 & 39

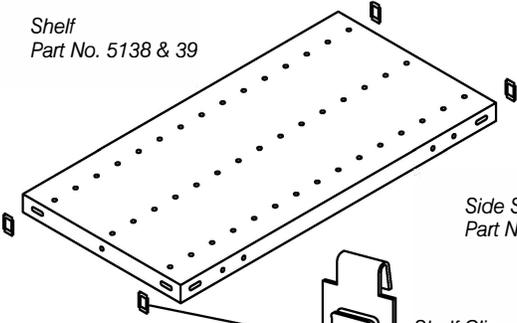

Side Sway Brace
Part No. 5344

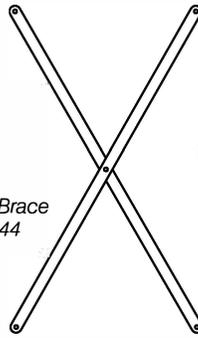

Foot Plates
Part No. 5050

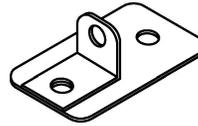

T-Post for
Adjoining
Sections
Part No. 5006



Back Post
Part No. 5004




Beaded
Front Post
Part No. 5002




Shelf Clip
Part No. 5133


End Sections For Closed Type Shelving
"T" Panel
Part No. 5094
End Panel
Part No. 5092

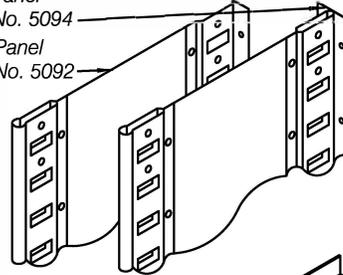


Back Panel
Part No. 5111

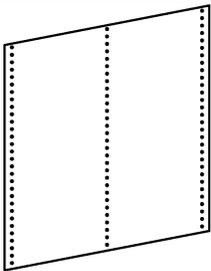


Back Panel Clip
Part No. 5120

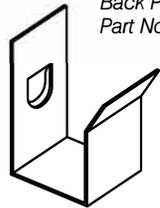


Side Panel
Part No. 5096

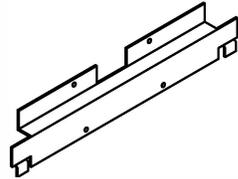


Class III
Shelf Support
Part No. 5136

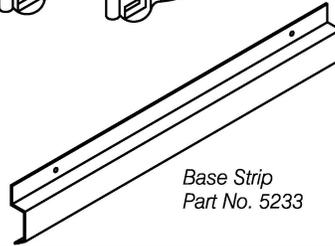

Base Strip
Part No. 5233

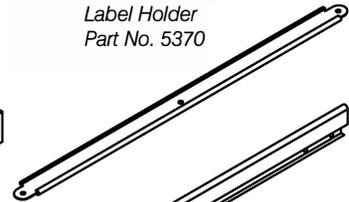

Label Holder
Part No. 5370

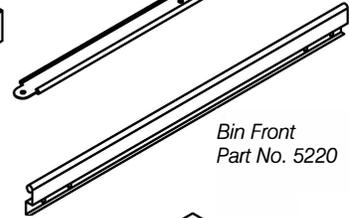


Bin Front
Part No. 5220



Class III
Center Support
Hat Section
Part No. 5137




Class III
Bottom
Part No. 5131

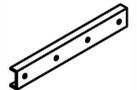


Splice Channel
Part No. 5009




Spring Clip
Part No. 5260

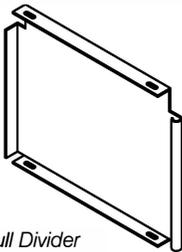

Full Divider
Part No. 5240

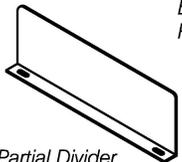

Partial Divider
Part No. 5250

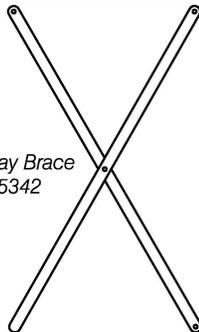


Back Sway Brace
Part No. 5342


HALLOWELL HI-TECH, CLIP SHELVING




CLASS 0

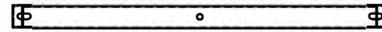


CLASS I

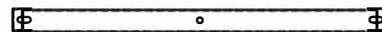

CLASS II

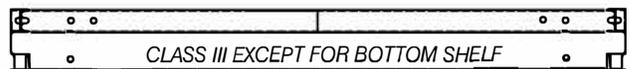

CLASS III EXCEPT FOR BOTTOM SHELF

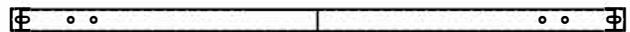


CLASS III BOTTOM SHELF ONLY



CLOSED TYPE SHELVING

END PANEL AND "T" PANEL ASSEMBLY

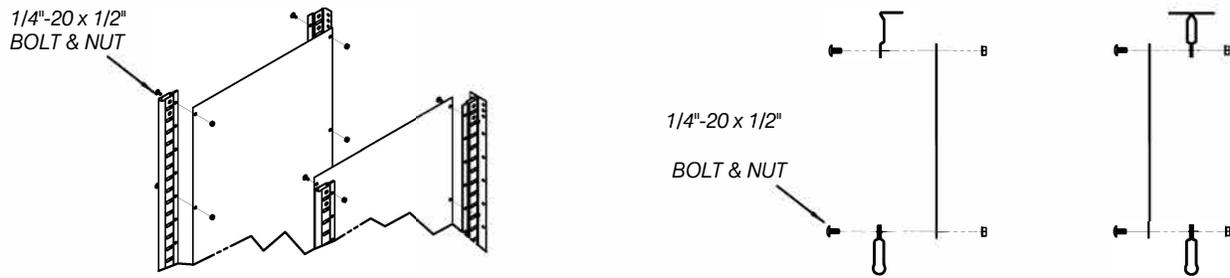

INDIVIDUAL UNITS - 3' 3" TO 10' 3" HEIGHTS

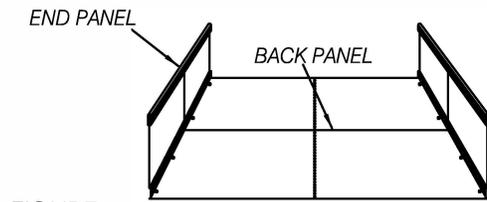


FIGURE 1

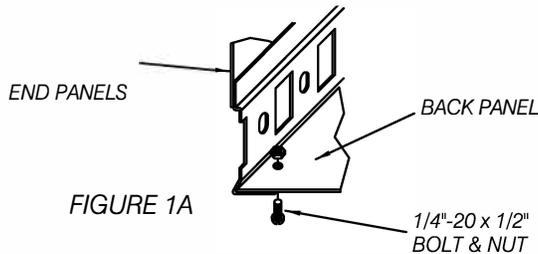


FIGURE 1A

STEP 1. END PANELS TO BACK PANEL

Use two end panels. Start with assembly in horizontal position, back panel flat on floor, bench or trestles.

Slide inside of back posts on end panel flat on floor, bench or trestles. Slide inside of back post on end panel under back panel and bolt. (Figure 1 & 1A)

NOTE: Units 3' 3" or greater in height require multiple back panels which overlap.

BACK TO BACK UNITS

Hook shelf clips into indentation at top of front & rear post, and hook back panel clip through top center hole in back panel. Position top shelf with rear flange on back panel clip and hook end flanges of shelf on shelf clips.

Then wedge in lock position.

STARTING, ADJOINING and BACK TO BACK UNITS

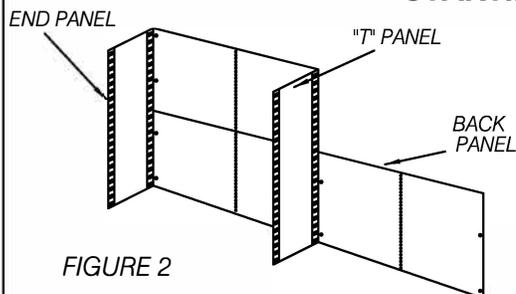


FIGURE 2

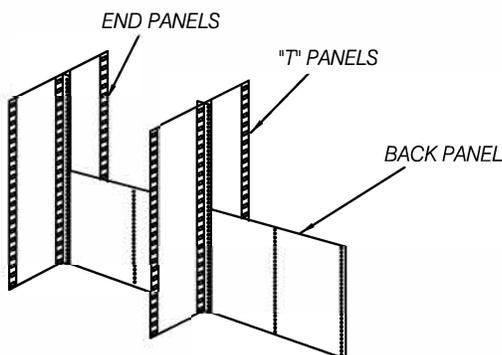


FIGURE 3

Use one end panel and one "T" panel for starting unit. Position lower back panel inside back post of end panel and bolt.

BACK TO BACK UNITS

Use two end panels in an upright position, back to back. Slide lower back panel between rear flanges of end panels and bolt (Figure 3).

Leave top holes of lower back panel unbolted; add "T" panels and lower back panels until rack of sides and backs are completely assembled.

- Add bottom shelves (as in Step 4) and shelf near center of units (as in Step 5).
- Add top half of back panels to rack, in same manner as lower half and bolt.
- Add top shelves to rack as in Step 2.
- Add necessary intermediate shelves as in Step 5.



CLOSED TYPE SHELVING

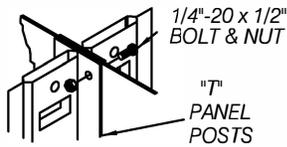


FIGURE 3A

STEP 2.

TOP SHELF (See Step 2 for Individual Units)

STEP 3. ACCESSORIES

Insert Class III shelf support (if required) in shelves. Add bin are not necessary for the top shelf. Spring clips are normally

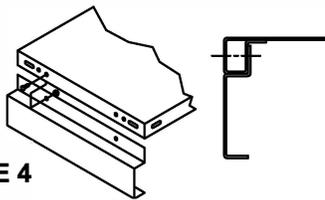


FIGURE 4

STEP 4. BOTTOM SHELF (All Units)

Bolt base strip to bottom shelf. (Figure 4). Hook shelf clips into second rectangular slots from bottom of post. Hook back panel to back units.

Position bottom shelf over back panel clip with end flanges hooked on shelf clips and wedge down.

STEP 5. ADDING REMAINING SHELVES

Hook shelf clips to panels (Figure 6A), position shelves with end flanges hooked on shelf clips and wedge shelves down in locked position as shown (Figure 6). Back panel clips should be used to secure back panel to shelves, except on back to back shelving. (Figure 7)

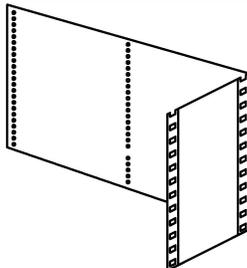


FIGURE 5

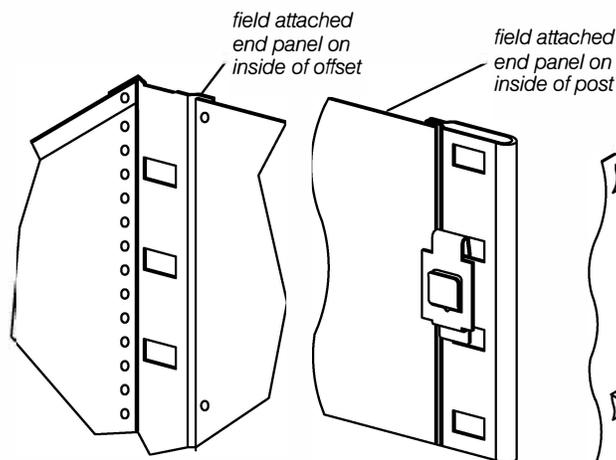


FIGURE 6B

FIGURE 6A

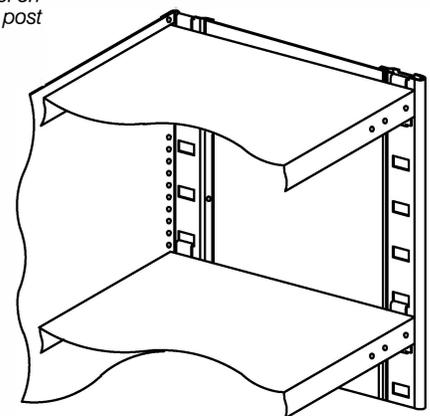


FIGURE 6

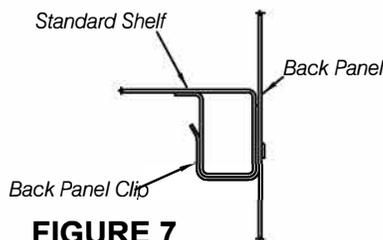


FIGURE 7

